

BM7850

Sunbeam

SmartBake® Custom Programmable Bread Maker

User Guide



Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة أعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاطهای بالا حتماً درک بشود

தோங்ணீஜா நீாக்கரர்வங்ரீஓங்காமப்ளஓட்காய்சாங்தாங்

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Contents

| | |
|----------------------------------------------------------|--------------|
| Using your SmartBake Custom Safely | 2-3 |
| Features of your Sunbeam SmartBake Custom | 4-6 |
| The Control Panel | 7 |
| Baking Process Monitor | 9 |
| Menu Settings | 10-11 |
| Using Your SmartBake Custom | 12-13 |
| Ingredients | 14-15 |
| Important Measuring Tips | 16 |
| Fruit and Nut Dispenser | 17 |
| The Baking Process | 18 |
| Programming your SmartBake Custom | 19-22 |
| How to use the Time Delay | 23 |
| Power Interruption Program Protection | 24 |
| Handy Hints | 25 |
| Care and Cleaning | 26 |
| Recipes | 27 |
| Program Setting Times | 64-65 |
| Program Setting Times and Display Information | 66 |
| Troubleshooting: The Machine | 67 |
| Troubleshooting: The Recipes | 68 |
| New Zealand Supplement | 70 |

Congratulations

You are just a few easy steps away from experiencing the aroma of fresh bread baking in your new Sunbeam SmartBake Custom.

We at Sunbeam understand the busy lifestyles that we live today and that's why when developing the SmartBake Custom we made baking a loaf of bread as easy as 1, 2, 3. Or for those with a little more time you can use the SmartBake Technology to create your own favourite recipes.

The SmartBake Technology ensures that your breadmaker is easy to use, fully programmable and has a Baking Progress Monitor, so that you know exactly what stage your machine is at in the bread making process.

The SmartBake Custom has been designed with a true Gluten Free Recipe. Specific program modifications have been developed with Coeliac Australia to ensure that your SmartBake Custom will allow those with Gluten intolerances, to bake successful Gluten Free recipes. The Gluten Free preset menu also acts as the basis for a Yeast Free recipe.

With your SmartBake Custom you have 76 baking and dough options including your Basic White, Gluten/Yeast Free, Wheat, Sweet, French, Pizza & Pasta dough and it even creates delicious fresh jam that tastes great on a freshly baked loaf.

You have a choice of 3 traditional horizontal loaf sizes from 750g up to a 1.25kg loaf and a choice of 3 crust settings to suit any size family and appetite. Baking with your SmartBake Custom is so easy to do and with the 15 hour pre-set timer you can set it the night before and wake up to a freshly baked loaf.

Before you start, we suggest that you read this booklet to ensure that you achieve the best results from your SmartBake Custom. We've done everything we can do to make bread baking a breeze, but if you have any concerns regarding the performance and use of your breadmaker, please call the Sunbeam Customer Service

Australia 1300 881 861

New Zealand 0800 786 232

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM BREAD MAKER

- Do not use attachments not recommended by Sunbeam. This may cause fire, electric shock or injury

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.

- Do not use outdoors or for commercial use, or for any other purpose other than its intended use
- This unit is intended for household use only

- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Using your SmartBake® Custom Safely

Before use

1. Read all instructions, product labels and warnings. Save these instructions.
2. Remove all foreign matter from the bread pan.
3. Wipe over bread pan and kneading blade before use.
4. Peel off plastic film from control panel and remove all static labels.
5. Always use the breadmaker from a 230-240V AC power outlet.
6. Do not allow anything to rest on the power cord or allow it to touch any hot surface. Do not plug in the cord where people may walk or trip on it or allow the cord to dangle over the edge of a table or benchtop.

Whilst in use

1. This breadmaker does get warm during operation. Be careful to keep your hands and face away from the unit.
2. Do not open the lid or remove the bread pan during operation except as indicated in the instructions.
3. Do not place anything on the breadmaker lid. Do not cover vents.
4. This breadmaker unit has built-in Power Interruption Program Protection to maintain your baking cycle, if there is an interruption in your power supply (black out). Any extended power outage may result in the program being cancelled see page 24 for full details.
5. Do not touch moving parts.

Where to use

1. Use only on a stable, heat-resistant surface.
2. Do not use the breadmaker where it will be exposed to direct sunlight or other heat sources, such as a stove or oven.

3. Do not place on top of any other appliance.
4. Keep the breadmaker out of reach of children as it does get quite warm. Also, if any buttons are accidentally touched during operation, baking may stop.
5. Place the unit at least 50 millimetres away from walls as they may discolour from the heat.

After use

1. Always turn the unit off and remove the plug from the power outlet after use, and before cleaning.
2. Use oven mitts when taking out the baking pan after baking.
3. Allow the breadmaker to cool down before cleaning or storing.
4. Read instructions before cleaning. Do not immerse the unit or plug in water. This will cause electric shock or damage to the unit.

Safety Precautions

1. Do not use attachments not recommended by Sunbeam. They may cause fire, electric shock or injury.
2. Do not use outdoors or for commercial use, or for any purpose other than its intended use.
3. Do not operate the unit if the cord or plug is frayed or damaged. Do not operate if the appliance has been dropped or damaged in any manner. Return appliance to the nearest Sunbeam Appliance Service Centre for examination, repair or mechanical or electrical adjustment.
4. Remove the plug by grasping the plug - do not pull on the cord.

Using your SmartBake Custom Safely continued

5. **Use of extension cords:** A short power supply cord has been provided to reduce the risk of injury resulting from becoming entangled in or tripping over a long cord. Extension cords should be used with care. The cord should be arranged so that it will not drape over the benchtop where it can be pulled by children or tripped over accidentally.
6. **Electrical power:** If the electric circuit is overloaded with other appliances, your breadmaker may not operate properly. The breadmaker should be operated on a separate electrical circuit from other operating appliances.
7. For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'Sealed' using tamperproof means as specified by SAA (Standards Association of Australia). Such appliances should always be returned to the nearest Sunbeam Service Centre for adjustment or repair if required.
8. For additional protection Sunbeam recommend the installation of a Residual Current Device (RCD) on all electrical appliances with a rated current not exceeding 30mA is advisable in the electrical circuit supplying the power outlet in use.
9. This appliance is not intended for use by young children or infirm persons unless they are adequately supervised by a responsible adult to ensure that they can use the appliance safely.
10. Young children should be supervised to ensure that they do not play with the appliance.

This unit is intended for household use only



**Hot Surfaces
Do Not Touch**

This symbol indicates, temperature of accessible surfaces may be high when the appliance is operating and for some time after use.

Features of your Sunbeam SmartBake® Custom

Automatic Fruit & Nut Dispenser

Automatically releases ingredients into the dough during the kneading cycle. Takes the guess-work out of recipes.

Large viewing window

Non-stick baking pan





Removable lid

Fully programmable control panel

LCD window

Traditional Horizontal loaf

3 horizontal loaf sizes up to 1.25kg with a choice of 3 crust settings to suit any size family and appetite.

Cord Wrap

Tidy cord wrap stores unwanted cord at the back of the breadmaker when not in use

Features of your Sunbeam SmartBake Custom continued

Your Sunbeam SmartBake Custom is a fully programmable dough and bread making machine that allows you to easily make fresh bread in only a few hours.

There are a host of other features:

Automatic Fruit & Nut dispenser

Automatically releases ingredients into the dough during the kneading cycle. Takes the guess-work out of recipes. See page 17 for more information.

8 programmable memory settings

SmartBake technology enables full programmability and saving of your favourite 8 recipes. Either start your recipe from scratch, or base it on one of the first 8 preset menus. See page 19 for more information.

76 baking and kneading options

Including Basic White, Gluten/Yeast Free, Wheat, French, Sweet, Cake, Extra Turbo, Jam, Pasta & Pizza Dough.

Baking Progress Monitor

Shows each stage of the bread baking process. See page 9 for more information.

15 hour Time Delay

Wake up to the smell of fresh hot crusty bread in the morning with the 15 hour time delay setting. See page 23 for more information.

Power Interruption Program Protection

Stores your program in the advent of a black out or power surge. When power resumes so does your program. See page 24 for more information.

Large viewing window

Allows you to watch each stage of the breadmaking cycle.

Display Window Sleep Mode

As the bread maker can be used at night and in the early morning hours (especially on the Time Delay mode), the display window has a sleep mode. The screen will change to sleep mode after 20 minutes and the screen will darken. Simply pushing any button will light the screen again to monitor your baking progress.

60 minute Keep-Warm function


Keeps bread warm for 1 hour after baking.

The Control Panel

The control panel on the SmartBake Custom is designed to ensure easy use and make baking a loaf of bread a pleasure.

The simple to use control panel enables you to select your desired baking program and features a large LCD window making it easy to see your selected menu and the completion time for the setting.

Menu

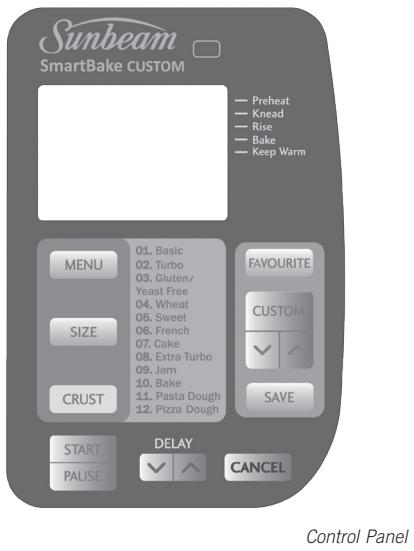


Display Window

The LCD window indicates the MENU setting selected from (1) to (12), Loaf SIZE and the CRUST Colour.

The display will show the number of hours and minutes until the cycle is complete - "0:00".

The screen will change to sleep mode after 20 minutes, and the screen will darken. Push any button to light up the screen again.

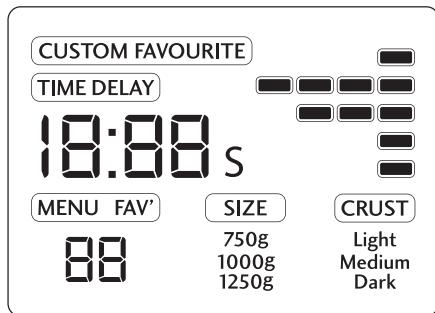

1. Menu

Press the MENU button to select automatic breadmaking menus from (1) to (12). Each of these menu settings are explained further on page 10. Each time you press the MENU button it cycles through the menus from (1) to (12).

The default menu when the breadmaker is turned on is MENU 1.

2. Size

Press the SIZE button to select the loaf size - 750g, 1.0kg or 1.25kg.

The default setting is 1.0kg.

3. Crust

Press the CRUST button to select the desired crust colour - Light, Medium or Dark.

The default setting is Medium.

4. Favourite Recipes

Press the FAVOURITE button to cycle through your saved favourite recipes. FAV will be displayed on the LCD. If you have not saved any recipes the LCD window will read "0:00" for each of the 8 favourite recipes.

The Control Panel continued

5. Custom

Allows you to create your own favourite recipes, or customise your program during the cycle. This button must be held for 2 seconds to activate any modifications.

6. Save

Allows you to save your favourite menus that you have customised to suit your own personal tastes. When a menu is saved it is indicated by a beep from the control panel.

7. Delay

Allows you to delay the completion of your desired menu up to 15 hours, or use it during programming to adjust the time of the current stage of your breadmaking cycle by pressing the buttons.

8. Cancel

This button allows you to instantly cancel out of programming or cancel the breadmaking process, or to completely delete a saved Favourite Recipe. Hold the button for 5 seconds. The breadmaker will beep to indicate the programme has been cancelled.

9. Start/Pause

Press the START/PAUSE button to commence selected menu or begin timer countdown for delay timer.

When the menu or timer countdown have commenced the timer colons : will flash indicating the machine has started.

If you would like to pause the current breadmaking cycle all you need to do is press the START/PAUSE button. The time will flash indicating that you are in 'PAUSE' mode. To resume the baking cycle you must press the button again.

Baking Progress Monitor


The baking progress monitor is located on the right of the LCD screen. The monitor displays each of the stages of the breadmaking cycle. During the breadmaking cycle one of these boxes is blacked out to indicate which stage of the cycle you are in.

Preheat

The preheat feature is part of the Wheat and Jam settings only. During the preheat stage the SmartBake is pre-warming the ingredients before the first kneading stage commences.

Knead

Signals that the loaf is in either of the 2 kneading or the 2 knock-down stages.

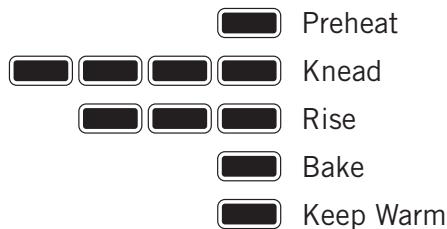

Rise

Signals that the loaf is in one of the 3 rising stages. During the different rise stages a low temperature is used which assists the rising process.

Bake

Signals that the loaf is in the bake stage. This is the final stage of the breadmaking cycle at which a higher temperature is used to bake the bread.

Keep Warm

The Keep Warm feature starts when the bread has completed the baking stage and keeps the bread warm for up to 60 minutes.

Baking Progress Monitor

Menu Settings

1. Basic

Press the MENU button once and the LCD window will show '1'. Use this menu to make traditional white bread. You have a choice of 3 crust colours - Light, Medium or Dark. The SmartBake Custom will default to a 1.0kg loaf with a Medium crust colour setting. To select a crust setting other than Medium, press the CRUST button. If you require a loaf size other than 1.0kg, press the SIZE button.

2. Turbo

Need bread in a hurry? The Turbo menu is used to decrease the overall completion time of your bread. Depending on your loaf size and crust colour, your bread will be ready in approximately 2 hours. The breads made using this menu may be shorter and more dense due to the reduced rising times. The default setting is 1.0Kg loaf with a Medium Crust. If you need your bread more quickly, use the Extra Turbo menu (8) which takes 80 minutes.

Tip: The Turbo menu should only be selected when baking Basic (1), Wheat (4), Sweet (5) & French (6) breads.

3. Gluten Free/Yeast Free

The Gluten Free menu on the SmartBake Custom has been tested thoroughly by Sunbeam with the assistance of Coeliac Australia, and has been specifically designed to meet the needs of many people who have intolerances to gluten. Due to the use of different ingredients in Gluten Free bread there are a few handy hints which you should read before you commence baking. Refer to the Gluten Free instructions in the recipe section. This menu can also be used for Yeast Free breads. Refer to the Yeast Free instructions in the recipe section. The default setting is 1.0Kg loaf with a Medium Crust.

4. Wheat

Use this menu for recipes with significant amounts of whole wheat, rye flour, oats or bran. This Wheat cycle begins with a 30 minute preheat cycle during which flours or grains absorb liquid ingredients. This causes flour or grains to soften and helps ingredients to combine. The machine will begin kneading after the preheat cycle is completed. Wheat breads also require more rising time to accommodate the slower rising action with whole wheat flour. It is normal for Wheat breads to be shorter and more dense in texture than Basic, French or Sweet breads. The default setting is 1.0Kg loaf with a Medium Crust.

5. Sweet

This cycle is for breads that require additional ingredients such as sugar, dried fruits or chocolate to sweeten the bread. The baking temperature is reduced to prevent burning. The default setting is 1.0Kg loaf with a Medium Crust.

Tip: To prevent the crust from becoming too dark, a Light crust colour is recommended.

Menu Settings - continued

6. French

This cycle is for breads that are lighter in texture and have crispier crusts, such as French and Italian breads. The default setting is 1.0Kg loaf with a Medium Crust.

Tip: This style loaf best suits loaves which are low in fat and sugar.

7. Cake

Make a variety of sweet and savoury homemade cakes on this menu. You can use this menu to mix and bake cakes. We recommend the use of pre-packaged cake mixes.

Tip: To prevent the crust from becoming too dark, a Light crust colour is recommended.

8. Extra Turbo

Use this Extra Turbo menu for ready made Basic bread in about 80 minutes. This menu is quicker than the Turbo menu (2). The crust colour is set to Medium, and is for 1.0kg loaf sizes only. This menu lets you save time on the bread recipes by reducing the completion time and is ideal for when you need bread in a hurry. Breads made using this menu may be shorter and more dense due to the reduced rising time.

9. Jam

You can now have fresh jam all year round. Use this menu to make fresh savoury and sweet jams.

Refer to the Jam instructions in the Recipe section.

Note: As with the Wheat menu (4) the Jam menu also features a preheat setting. The SmartBake Custom will begin to mix after this preheat setting is completed.

10. Bake

Use this menu for an immediate baking process. This menu is useful if the crust is too light or if your bread is not quite done and requires more baking time. This setting can be controlled manually by pressing the START/ PAUSE button to stop the function at any time.

This menu can also be used to complete the bread baking process in case of a power failure. If there has been a power failure, allow the dough to rise in the bread pan without power until it reaches $\frac{3}{4}$ of the way up the bread pan. Reconnect electricity and select the Bake menu (10), and press START.

Note: You may need to wait 10-15 minutes for the machine to cool down, before you select the Bake menu. If you attempt to use the Bake menu before the machine has cooled down, an error message will appear on the display - "E:01".

11. Pasta Dough

This menu allows you to make pasta dough for fresh pasta. Feed the pasta through a pasta machine to make fettuccini, ravioli and lasagne. Refer to the Pasta instructions in the Recipe section.

12. Pizza Dough / Dough

This menu allows you to create a variety of doughs for breads, croissants, bread rolls and pizza, to bake in a conventional oven. Refer to the Dough instructions in the Recipe section.

Using your SmartBake® Custom

Before using your SmartBake Custom for the first time

We recommend that you remove the baking pan and wipe over the bread pan and kneading blade with a damp cloth and dry thoroughly.

Do not immerse the bread pan in water unless necessary. Do not use harsh abrasive cleaners as they may damage the non-stick surface. Do not place any parts of your breadmaker in the dishwasher.

Removing the baking pan

Open the lid of your SmartBake Custom and remove the baking pan by taking hold of the baking pan handle and lifting it straight up. It is a good idea to remove the baking pan before adding ingredients so that no ingredients are spilt into the baking chamber and onto the element.

Step 1. Adding ingredients

We recommend that you add the ingredients into the bread pan in the order listed. All ingredients should be at room temperature and measured carefully. All recipes listed in this booklet use local ingredients and Australian Standard Metric Measuring tools (spoons, cups and measuring scales).

Step 2. Replacing the baking pan

To return the baking pan to the baking chamber simply position the baking pan into the baking chamber and push down until it slots into position. Lay the handle flat toward the side of the bread pan. Close the lid securely, plug the machine into a 230-240 volt AC power outlet and turn the power ON.

Note: When the machine is first plugged in, the LCD window will beep and flash "0.00" until a menu is selected.

Step 3. Add Fruit and Nuts if required

If your recipe includes extra ingredients such as fruit or nuts, add these to the automatic fruit and nut dispenser. Your SmartBake Custom will add the fruit and nuts automatically during the bread making process. Do not use the dispenser for ingredients such as cheese, as these will melt in the dispenser before it's released. Small grains & seeds may fall through the gaps. If using ingredients such as linseeds, sesame seeds etc, add these straight to the bread pan.

Step 4. Select Menu

Press the MENU button to make your desired selection. As you press the MENU button you move through each of the recipes from (1) to (12) and as you scroll through the recipes the number is displayed in the LCD window.

Step 5. Select Size

Press the SIZE button to select the desired loaf size - 750g, 1.0kg or 1.25kg. The default loaf size is 1.0kg.

Step 6. Select Crust

Press the CRUST button to select your choice of crust colour. You are able to choose from the Light, Medium or Dark crust colours on selected settings. The default crust colour is Medium.

Step 7. Press Start

Press the START button to commence selected setting. The LCD window will display the hours and minutes until the menu is complete.

Using your SmartBake® Custom continued

Step 8. Hot fresh crusty bread

When the bread is finished baking, the SmartBake Custom will beep and “0:00” will appear in the LCD window. A red light located on the control panel, will flash for approximately 15-20 minutes.

Once the red light has stopped flashing, using oven mitts, remove the baking pan from the baking chamber by lifting it straight up. Note: the bread pan and loaf are very hot. Be careful not to place these on any heat sensitive surface that may scorch.

Allow the bread to cool in the bread pan for 10 minutes before removing. Then with the oven mitts tap the sides and base of the baking pan and turn upside down and gently shake until the bread slides out. If necessary, use a plastic spatula to loosen bread from the side of the pan. Place the bread on a wire rack and allow the bread to cool. We recommend that sufficient cooling time is approximately 15 minutes to ensure optimum bread texture and this also makes slicing easier.

Keep Warm

If the bread is not removed immediately after baking and PAUSE is not pressed, the SmartBake Custom will automatically switch to a Keep Warm cycle for 60 minutes. Warm air will circulate throughout the baking chamber to help reduce condensation.

After 60 minutes on Keep Warm cycle, the machine will beep and the machine will go to a standby mode. The bread can be removed from the baking chamber at the end of the baking cycle or any time during the Keep Warm cycle. Simply press the PAUSE button for 3 seconds to end the Keep Warm period and turn off the bread maker at the powerpoint. Note: Keep Warm does not apply to the Pasta Dough and Pizza Dough menus.

After using your SmartBake Custom

Unplug the machine and allow it to cool for 30 minutes before commencing another program. If you attempt to use the SmartBake Custom too soon, it may beep and the display will read ‘E:01’, indicating the SmartBake Custom has not cooled sufficiently. Wait until the SmartBake Custom has cooled and then press START.

Tip: The screen will change to sleep mode after 20 minutes, and the screen will darken. Push any button to light up the screen again.

Ingredients

Yeast

Yeast is actually a microscopic plant. Simply stated, without yeast, your bread will not rise. When moistened by a liquid, fed by sugar and carefully warmed, yeast produces gases that power the dough to rise. If the temperature is too cold, the yeast will not be activated; if it's too warm, it will die. Your SmartBake Custom takes care of this worry for you by maintaining just the right temperature in the baking chamber at all times.

Some yeasts may require the use of a bread improver. The Bread Improver will provide additional gluten to the flour to produce a better loaf.

Tip: We do not recommend the use of fresh or compressed yeast in your breadmaker. Sunbeam recommends the use of dry yeast only. Always ensure it is used well within the use-by date, as stale yeast will prevent the bread from rising. We suggest that a small pocket be made in the top of the dry mixture to hold the yeast. This will ensure its activation when in contact with the liquid and sugar during kneading.

Flour

In order for the bread to rise, the flour has to have a sufficiently high protein content. Sunbeam recommends the use of a good quality plain or bread flour. The texture and height of the bread will be inconsistent if the flour is stored for long periods of time in unsatisfactory conditions. Purchase bulk packs of flour only if baking constantly. Unlike white flour, wheat flour contains bran and wheatgerm which inhibit rising. Wheat breads therefore, tend to be heavier in texture and smaller in size. A lighter, larger loaf can be achieved by combining wheat flour with white flour for whole wheat bread recipes.

Bread Improver

The use of Bread Improver is recommended to achieve optimum results. Bread Improver will increase the gluten content of the flour mix. It will also influence the structure, size and texture of the bread, so that it does not collapse when baking. The suggested quantity to use is stated in all recipes. Bread Improver has a flour like texture and can be purchased through health food shops or through selected supermarkets.

Sugars

Sugars sweeten the bread, brown the crust, lend tenderness to the texture and supply the yeast with food. White or brown sugar, molasses, maple or golden syrup, honey and other sweeteners may be used in equivalent quantities. Artificial sweetener can be substituted in equivalent amounts, however the taste and texture of your bread will vary.

Liquids

When liquids are mixed with protein in flour, gluten is formed. Gluten is necessary for the bread to rise. Experiment with quantities of these liquids to obtain optimum results. Liquids should be used at room temperature. A recipe with too much liquid may cause the bread to fall during baking while a recipe with too little liquid will not rise.

Salt

In small amounts, salt adds flavour and controls yeast action. Too much salt inhibits rising, so be sure to measure amounts correctly. Any ordinary table salt may be used.

Ingredients continued

Eggs

Eggs are used in some bread recipes. They provide liquid, assist with the rising and increase the nutritional value of the bread. They add extra flavour and are usually used in the sweeter types of bread. Recipes in this booklet use extra large 59g eggs.

Fats

Many breads use fats to enhance the flavour and retain moisture. Typically, we use margarine in the recipes. Softened butter or oil may be used in equivalent quantities. If you choose not to add any fat, your bread may vary in taste and texture.

Bread mixes

A variety of bread mixes can be used in your bread maker. All brands of store bought bread mixes are different. Please use the baking instructions supplied with your breadmix rather than the SmartBake Custom menu. Some bulk bread mixes may require the use of a bread improver. We recommend you contact the Bread Mix manufacturer for further information on the use of their product.

Hints

- Different brands of yeast, used with different brands of flour, will influence the size and texture of your bread. Experiment with these ingredients to determine which combination of ingredients gives you the best result.
- It is normal for breads to be inconsistent in height and texture even if you are using the same ingredients time and time again. This inconsistency is usually influenced by the natural varying protein levels of wheat in the flour, the yeast and the humidity and temperature.

Important measuring tips

Each ingredient in a loaf of bread plays a specific role, so it is extremely important to measure the ingredients correctly to get the best results.

We recommend using Australian standard measuring jugs, cups and spoons. Weight measurements are provided if you wish to use a kitchen scale.

Australian standard


Teaspoon = 5mls

Tablespoon = 20mls

1 cup = 250mls

Dry ingredients

Use a metric measuring spoon or cup. Do not use tableware spoons or cups. Spoon the dry ingredients loosely into the spoon or cup and level off with a flat knife. This is particularly important with flour. Do not pack dry ingredients down into the cup or tap the cup unless otherwise stated in the recipe.

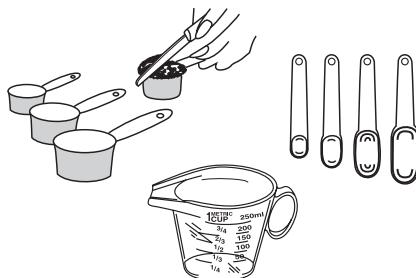

Liquids

Fill a metric measuring spoon or jug to the level indicated. Check your jug measurement by placing the measuring jug on a flat surface and reading the measurement at eye level.

1ml = 1g water

Solid fats

Fill a metric measuring spoon or cup to the level indicated and level off with a flat knife. Alternatively use kitchen scales.

Last Things Last!

Place the liquid in the bread pan first, the dry mix ingredients in next. Then, make a small pocket in the top of the dry ingredients and place the yeast in the pocket. Wipe away any spills from around the outside of the pan. This will ensure a well risen and evenly baked loaf.

Fruit and Nut Dispenser

Your SmartBake Custom has an Automatic Fruit and Nut dispenser which automatically releases dry ingredients into the dough during the kneading cycle. This will occur during the second kneading cycle, ensuring that the dried fruit and nuts are not crushed and the pieces remain whole and are evenly dispersed.

This option is available on all menus, however we recommend use only on the Basic (1), Gluten/ Yeast Free (3), Wheat (4) and Sweet Bread (5).

Do not overfill the dispenser and ensure the dispenser is closed prior to each use. The dispenser may be open from the previous time it was used.

The Baking Process

Mixing, Kneading, Rising, Baking.... Here's a glimpse of how your Sunbeam SmartBake Custom automatically does all the steps for you.

Mixing and kneading

In standard bread baking, the baker mixes the ingredients first by stirring, then by kneading the dough by hand. The SmartBake Custom mixes and kneads the dough automatically for you.

Rising

When making bread by hand, the dough is placed in a warm place to rise after mixing, so that the yeast can ferment and produce gas. After mixing the dough, the SmartBake Custom maintains the optimum temperature for rising during this part of the process.

If you are using the Dough cycles, the SmartBake Custom will stop at the end of the first rising. The dough can then be removed and shaped - focaccia, pizza, bread rolls or any other creations, and placed in your own oven for baking.

Knock Down

Once the dough has risen, the baker will typically "knock down" the dough. This process helps to break apart large, unwanted pockets of air and gas that have developed through rising, giving the bread a more even and appetising texture. The SmartBake Custom handles this process automatically for you by turning on the kneading blade at just the right time.

Second Rise

After it is knocked down, the bread bounces back, and rises a second time. Some breads require shorter or longer rising times. For example, wheat breads require a long rising time because the flour contains bran and wheat germ which inhibits rising.

The SmartBake Custom regulates the temperature and timing of this second rise automatically for you based on your selection.

Bake

The SmartBake Custom automatically regulates baking time and temperature for perfect results every time.

Cool

In standard baking, the baker removes the bread from the pan immediately to keep the crust from turning soggy. The SmartBake Custom has a 60 minute keep warm feature which helps remove the hot air from the baking chamber after the bread is done. This keeps the crust from getting soggy. After removing the bread, leave to cool for at least 15 minutes before slicing.

Programming your SmartBake® Custom

The SmartBake technology of your breadmaker allows you to program 8 of your own recipes.

By following these few simple instructions your favourite recipes will be at your fingertips.

Before commencing programming of your favourite recipes, it's important that you have a good understanding of each of the stages of the breadmaking cycle.

Note: The order in which each of these stages are discussed below are not true to the sequence of the breadmaking cycle. They have been detailed in the below layout for ease.



Baking Progress Monitor

Preheat Your SmartBake Custom features a Preheat function which helps to bring the ingredients to the optimum temperature for the yeast to activate when the kneading cycle begins. This is mainly used on Wheat breads and when making Jam, but is also handy to use on cold days.

The adjustable time for Preheat is: 0 - 99 minutes.

Kneading The Kneading cycle turns your ingredients to dough and is the most vital stage of breadmaking. It mixes the ingredients, activates the yeast and forms the frame work for the dough to rise



The adjustable time for Knead 1 is: 0 - 10 minutes.

The mixing paddle speed: Slow



The adjustable time for Knead 2 is: 0 - 30 minutes.

The mixing paddle speed: Fast

Although included as part of the kneading cycle, the knock down controls the expansion of gas in the rising cycles (ridding unwanted air pockets).



The adjustable time for Knockdown 1 is: 0 - 30 seconds.

The mixing paddle speed: Fast



The adjustable time for Knockdown 2 is: 0 - 30 seconds.

The mixing paddle speed: Fast

Programming your SmartBake Custom - continued

Rising

The temperature of your SmartBake Custom increases causing the dough to expand and rise.



The adjustable time for Rise 1 is: 0 - 99 minutes.

Temperature: Warm



The adjustable time for Rise 2 is: 0 - 99 minutes.

Temperature: Warm



The adjustable time for Rise 3 is: 0 - 99 minutes.

Temperature: Warm

Baking

The temperature of your SmartBake Custom increases again which encourages the dough to expand further.



The adjustable time for Baking is: 0 - 99 minutes.

Temperature: High

Keep Warm



The adjustable time for Keep Warm is: 0 - 99 minutes.

Temperature: Warm

Programming your SmartBake Custom - continued

When programming you can either adapt and customise one of the existing preset menus or you can start from scratch. To customise an existing preset menu, start at step 1 below. To program your own recipe from scratch, press the FAVOURITE button, and start at Step 3 below.

1. Press the FAVOURITE button.
2. To customise an existing menu, select from one of the existing menus from (1) to (8). This will be the basis of your new recipe. Simply press the MENU button to cycle through the menus.

Note: Refer to the Program Setting Times chart on page 64, so you can choose the most appropriate menu.

3. To commence programming press the CUSTOM button for 2 seconds.

The control panel will beep once, CUSTOM FAVOURITE will show on the LCD window and the first stage of the breadmaking cycle - Preheat will flash.

4. To adjust times press the $\checkmark \wedge$ buttons. When you have selected the desired time, press the CUSTOM button to move to the next stage of the breadmaking cycle. Then press the $\checkmark \wedge$ buttons again to select your desired times. Repeat this until all times have been entered. When you have programmed the times for all stages ending in the KEEP WARM stage, press the CUSTOM button to finalise your favourite menu.

Note: The process is completed when a longer double beep is heard, FAV will flash on the LCD window and the total breadmaking cycle time is displayed.

5. Once you have finished programming, you can either save your recipe now, by simply pressing the SAVE button, FAV will stop flashing and the control panel will beep 3 times.

Your recipe has now been saved into one of the 8 Favourite Recipe slots.

OR

You can test your recipe first, without yet saving it by simply pressing START. If you then want to save the recipe you must ensure that you press SAVE during but before the end of the KEEP WARM mode.

Note: You can not save the recipe once the Keep Warm cycle is complete.

6. To cancel the programming process at any stage simple press the CANCEL button.

Changing a Favourite Recipe

You can make changes to, or replace any of your saved Favourite Recipes at any time.

1. Select the recipe you wish to modify by pressing the FAVOURITE button. This will allow you to scroll through Favourite Recipes (1) to (8).
2. To commence programming press the CUSTOM button for 2 seconds. The control panel will beep once and the first stage of the breadmaking cycle - Preheat will flash. You can now follow the instructions as given in the programming section, steps 3 - 5.

Programming your SmartBake Custom - continued

Deleting a Favourite Recipe

You can completely delete a saved Favourite Recipe.

1. Select the recipe by pressing the FAVOURITE button and scrolling through to the recipe you wish to delete.
2. To delete press the CANCEL button for 5 seconds until you hear a beep and the screen changes to 00:00.

Previewing Menus and Favourite Recipes

1. You can preview any program prior to beginning the breadmaking process by pressing the CUSTOM button for 5 seconds until you hear a beep. Continuously press the CUSTOM button to scroll through all stages.
2. To exit from previewing a Menu or Favourite Recipes press the CANCEL button. This will automatically return you to the beginning of the current Menu or Favourite Recipes.

How to use the Time Delay

The SmartBake Custom allows you to delay the completion of your bread by up to 15 hours, so you can wake up to the smell of freshly baked bread, or go out for the day while your SmartBake Custom does all the work.

Note: Do not use the Time Delay when the recipe has perishable ingredients such as milk, eggs or cheese as these may spoil.

1. Follow steps 1 – 6 on page 12.
2. Press **▼ ▲** buttons in the **DELAY** menu until you reach the number of hours and minutes you want your bread to be ready. **DELAY** will show on the LCD window. Press to add or minus time in 10 minute intervals.
3. Press **START** button to commence the program. The LCD window will display the hours and minutes until the menu is complete.

Note: You do not need to take into account the amount of time required to cook the program selected. This is automatically registered in the SmartBake Custom when it is selected.

Example

Before leaving for work at 8am, you decide to set the Time Delay so that the bread or selected program will be ready and completed by 6pm when you return home – which is 10 hours later. Set the timer for 10:00. This tells you that your bread or selected program will be complete in 10 hours. The SmartBake Custom will begin counting down and your selected program will be complete by 6pm.

Tip: In the Delay mode, the LCD window will darken and go into a sleep mode. To view the screen again and check your setting and remaining time, briefly press any button to illuminate the screen.

Power Interruption Program Protection

Your SmartBake Custom features a 10 minute Power Interruption Protection that protects the program memory from power surges, or short term power failure (blackout). This means that if there is a power interruption during your bread making, the machine will retain its memory for up to 10 minutes and continue cooking when the power supply returns.

If you experience a power failure greater than 10 minutes you may need to discard ingredients and start again. If the power interruption occurs in the baking cycle, you can use the Bake menu (10) setting to finish baking.

Handy hints

Order of ingredients

Place liquid in first, the dry ingredients in next and the yeast in last.

Freshness

Ensure all ingredients are fresh and used before the specified use-by date. Avoid using perishable ingredients such as milk, yoghurt, eggs or cheese, with the Time Delay function. Store dry ingredients in airtight containers, to keep them fresh.

Slicing bread

For best results, wait at least 15 minutes before slicing, as the bread needs time to cool. Place loaf on its side and cut in a sawing motion with a bread knife. For easy and even slicing we recommend the use of the Sunbeam Carveeasy electric knife.

Freezing bread

To freeze fresh bread, let it cool completely and wrap in several layers of plastic. Slice bread before freezing and use at your convenience.

Toppings

Ingredients such as herbs, sesame seeds and chopped bacon can be added to the top of the bread during the baking stage. Open the lid of the SmartBake Custom, gently brush top of the loaf with a little milk or egg yolk and sprinkle with topping. (Do not allow ingredients to fall outside pan). Close lid and allow baking to continue.

Tip: This step needs to be done quickly and gently to prevent bread from sinking.

Crust colour

It is normal for the top of the bread to be lighter in colour than the sides. Different combinations of ingredients can encourage or discourage browning.

Baking at high altitudes

At high altitudes above 900 metres, dough rises faster. Therefore, when baking at high altitudes some experimentation is required. Follow the suggested guidelines. Use one suggestion at a time and remember to write down which suggestion works best for you.

Suggestions:

1. Reduce the amount of yeast by 25%. This will stop the bread from over-rising.
2. Increase the salt by 25%. The bread will rise slower and have less of a tendency to sink.
3. Watch your dough as it mixes. Flour stored at high altitudes tends to be drier. You may have to add a few tablespoons of water, until the dough forms a nice ball.

Care and Cleaning

Before cleaning the SmartBake Custom, unplug it from the power outlet and allow it to cool completely.

To clean the exterior

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

Do not use metal scourers or abrasives as this may scratch the exterior surface.

To clean the non-stick baking pan

Gently wash bread pan in warm soapy water using a soft cloth and dry well before and after each use. Wipe baking pan and kneading blade with a damp cloth and dry thoroughly. Do not use any harsh abrasives or strong household cleaners as these may damage the non-stick surface.

Caring for your non-stick baking pan

Do not use metal utensils to remove ingredients or bread, as they may damage the non-stick coating. Do not be concerned if the non-stick coating wears off or changes colour overtime. This is a result of steam, moisture, food acids, mixing of various ingredients and normal wear and tear. This is in no way harmful and does not affect the performance of your SmartBake Custom.

Do not wash any part of your bread maker in a dishwasher.

Do not immerse the SmartBake Custom in water.

Remove and clean lid

To remove lid, simply raise the lid just short of the vertical position (approx. 70°). While holding the base of the unit with one hand, gently lift the lid out of the hinge. Wipe interior and exterior of lid with a damp cloth and dry thoroughly before replacing lid.

Storage

Make sure the SmartBake Custom is completely cool and dry before storing. Store the SmartBake Custom with the lid closed and do not place heavy objects on top of the lid.

Recipes: Basic Breads

Menu 1

All the recipes have been specifically created and tested by our Sunbeam Test Kitchen for the SmartBake Custom. We hope you enjoy.

To use the Basic Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 1 (Basic). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.
6. Press START. Bread will be baked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

| Traditional White Loaf | 750g | 1kg | 1.25kg |
|------------------------|---------------|---------------|-----------------|
| Luke-warm Water | 315mls | 380mls | 515mls |
| Butter | 20g | 40g | 60g |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Sugar | 1 tablespoon | 1 tablespoon | 1 ½ tablespoons |
| Skim Milk Powder | 1 tablespoon | 2 tablespoons | 3 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 500g | 600g | 760g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Basic Breads continued

| Milk Bread | 750g | 1kg | 1.25kg |
|----------------|-----------------|---------------|---------------|
| Milk | 280mls | 350mls | 440mls |
| Butter | 20g | 20g | 30g |
| Salt | ¾ teaspoon | 1 teaspoon | 1 ¼ teaspoons |
| Sugar | 1 ½ tablespoons | 2 tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 465g | 580g | 725g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |

| Cornbread | 750g | 1kg | 1.25kg |
|------------------------------------------|---------------|----------------|-----------------|
| Luke-warm Water | 240mls | 300mls | 360mls |
| Butter | 20g | 20g | 30g |
| Cornmeal (polenta) | 55g (1/3 cup) | 55g (1/3 cup) | 110g (2/3 cup) |
| Sugar | 2 ½ teaspoons | 1 tablespoon | 1 ½ tablespoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Skim Milk Powder | 1 tablespoon | 1 tablespoon | 1 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Dried Thyme | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Plain Flour | 385g | 480g | 575g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit & Nut Dispenser | | | |
| Canned Corn Kernels, drained, pat dry | 80g (½ cup) | 110g (2/3 cup) | 120g (¾ cup) |

Basic Breads continued

| Sunflower Loaf | 750g | 1kg | 1.25kg |
|----------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 250mls | 325mls | 400mls |
| Butter | 20g | 30g | 40g |
| Honey | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Fine Cracked Wheat | ⅓ cup | ⅓ cup | ½ cup |
| Plain Flour | 440g | 520g | 600g |
| Dried Yeast | 1 ½ teaspoons | 1 ½ teaspoons | 2 teaspoons |
| Fruit & Nut Dispenser | | | |
| Sunflower Seeds | ⅓ cup | ⅓ cup | ½ cup |

| Herbie Cheese Bread | 750g | 1kg | 1.25kg |
|----------------------------|-----------------|---------------|-----------------|
| Luke-warm Water | 235mls | 310mls | 415mls |
| Butter | 30g | 40g | 50g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 2 ½ teaspoons | 1 tablespoon | 1 tablespoon |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Skim Milk Powder | 1 ½ tablespoons | 2 tablespoons | 2 ½ tablespoons |
| Grated Mozzarella | ¼ cup | ⅓ cup | ½ cup |
| Dried Mixed Herbs | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Plain Flour | 350g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Basic Breads continued

| Sour Cream and Chilli Bread | 750g | 1kg | 1.25kg |
|------------------------------------|-----------------|---------------|-----------------|
| Luke-warm Water | 120mls | 150mls | 200mls |
| Sour Cream | ½ cup | ¾ cup | 1 cup |
| Chilli Powder | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Brown Sugar | 2 ½ teaspoons | 1 tablespoon | 1 ½ tablespoons |
| Skim Milk Powder | 1 ½ tablespoons | 2 tablespoons | 3 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 430g | 540g | 780g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |

| Garlic and Herb Bread | 750g | 1kg | 1.25kg |
|------------------------------|---------------|-----------------|-----------------|
| Luke-warm Water | 235mls | 315mls | 415mls |
| Butter | 20g | 30g | 40g |
| Garlic, crushed | 1 clove | 2 cloves | 2 cloves |
| Dried mixed Herbs | 2 teaspoons | 2 ½ teaspoons | 1 tablespoon |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 2 ½ teaspoons | 1 tablespoon | 1 ½ tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 450g | 560g | 610g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Basic Breads continued

| Tomato and Basil Bread | 750g | 1kg | 1.25kg |
|-------------------------------|-------------------|-----------------|-------------------|
| Luke-warm Water | 235mls | 315mls | 415mls |
| Butter | 30g | 40g | 50g |
| Basil, fresh, chopped | 1/4 cup | 1/3 cup | 1/2 cup |
| Tomato Paste | 1 1/2 teaspoons | 2 teaspoons | 1 tablespoon |
| Salt | 1 teaspoon | 1 1/2 teaspoons | 2 teaspoons |
| Sugar | 2 teaspoons | 1 tablespoon | 1 1/2 tablespoons |
| Skim Milk Powder | 1 1/2 tablespoons | 2 tablespoons | 2 1/2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 345g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 1/2 teaspoons | 1 1/2 teaspoons |

| Italian Herb Bread | 750g | 1kg | 1.25kg |
|----------------------------|-------------------|-------------------|-----------------|
| Luke-warm Water | 235mls | 315mls | 415mls |
| Butter | 30g | 40g | 50g |
| Mixed Fresh Herbs, chopped | 1 1/2 tablespoons | 2 tablespoons | 3 tablespoons |
| Salt | 1 teaspoon | 1 1/2 teaspoons | 2 teaspoons |
| Sugar | 1 tablespoon | 1 1/2 tablespoons | 2 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 1/2 tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 345g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 1/2 teaspoons | 1 1/2 teaspoons |

Basic Breads continued

| Rosemary and Olive Oil Bread | 750g | 1kg | 1.25kg |
|-------------------------------------|-----------------|-----------------|-----------------|
| Luke-warm Water | 180mls | 240mls | 315mls |
| Olive Oil | 55mls | 75mls | 100mls |
| Fresh Rosemary, finely chopped | 2 ½ teaspoons | 1 tablespoon | 1 ½ tablespoons |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Skim Milk Powder | 1 ½ tablespoons | 2 tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 345g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

| Sundried Tomato and Olive Bread | 750g | 1kg | 1.25kg |
|----------------------------------------|-----------------|---------------|---------------|
| Luke-warm Water | 235mls | 315mls | 400mls |
| Butter | 20g | 30g | 40g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 2 teaspoons | 2 ½ teaspoons | 3 teaspoons |
| Skim Milk Powder | 1 tablespoon | 2 tablespoons | 3 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 450g | 600g | 650g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit & Nut Dispenser | | | |
| Sundried Tomatoes, drained, chopped | 1 ½ tablespoons | 2 tablespoons | 3 tablespoons |
| Pitted Kalamata Olives, sliced | 1 ½ tablespoons | 2 tablespoons | 3 tablespoons |

Basic Breads continued

| Salami Cheese Bread | 750g | 1kg | 1.25kg |
|----------------------------|---------------|-----------------|-----------------|
| Luke-warm Water | 250mls | 315mls | 415mls |
| Butter | 30g | 40g | 50g |
| Dried Oregano | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sliced Salami, chopped | 60g | 80g | 100g |
| Grated Mozzarella Cheese | ¼ cup | ⅓ cup | ½ cup |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 1 ½ teaspoons | 2 teaspoons | 1 tablespoon |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 350g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

| Lemon Poppy Seed Bread | 750g | 1kg | 1.25kg |
|-------------------------------|--------------|-----------------|-----------------|
| Water | 250mls | 315mls | 415mls |
| Butter | 20g | 30g | 40g |
| Lemon Zest | 1 tablespoon | 2 tablespoons | 2 ½ tablespoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 3 teaspoons | 1 tablespoon | 1 tablespoon |
| Poppy Seed | 1 teaspoon | 2 tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 350g | 460g | 680g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Basic Breads continued

| Crunchy Almond and Honey Bread | 750g | 1kg | 1.25kg |
|---------------------------------------|---------------|-------------------|-------------------|
| Luke-warm Water | 250mls | 315mls | 415mls |
| Butter | 30g | 40g | 50g |
| Almonds, slivered | 1/4 cup | 1/2 cup | 3/4 cup |
| Salt | 1 teaspoon | 1 1/2 teaspoons | 2 teaspoons |
| Honey | 2 tablespoons | 2 1/2 tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 1/2 tablespoons | 2 1/2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 350g | 460g | 610g |
| Dried Yeast | 1 teaspoon | 1 1/2 teaspoons | 1 1/2 teaspoons |

Basic Turbo Breads

Menu 2

Using this Turbo menu, basic breads will be ready in about 2 hours. If you need your bread more quickly, use the Extra Turbo menu (8) which takes about 80 minutes.

To use the Turbo Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
- Note:** We only recommend using the Basic bread recipes (menu 1) on the Turbo setting.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.

5. Press the MENU button to select menu 2 (Turbo). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.
6. Press START. Bread will be baked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

Gluten/Yeast Free Breads Menu 3

To use the Gluten/Yeast Free Bread setting:

1. Ensure kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 3 (Gluten/Yeast Free). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.
6. Press START.

Note: Due to the density of the dough especially in cooler climates, breads on this setting may need assistance in the first 5 minutes of kneading. Scrape the sides and base of the pan with a plastic spatula. (If using the fruit and nut dispenser, hold the lid to avoid spillage when opening the bread maker lid). You may also wish to add more water.

7. On completion, use oven mitts to remove the bread pan from the baking chamber.

Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

TIP: There are many factors that can influence the success of your Gluten Free loaf such as quality of ingredients and environment conditions – altitude, humidity and temperature.

We recommend experimenting with the programmability of the SmartBake Custom and customising the menu to your conditions and needs.

One suggestion that we have tested in different regions of Australia is to extend the second kneading stage – Knead 2. You can adapt the existing Gluten Free preset menu (Menu 3) and save as a Favourite.

See page 19 for more information regarding Programming your SmartBake Custom.

TIP: Some Gluten Free loaves can become 'doughy' in the Keep Warm stage. You may wish to remove your loaf immediately after the Baking stage, and not allow it to stay in the Keep Warm stage.

| Gluten Free Rice Bread | 750g | 1kg | 1.25kg |
|------------------------|---------------|---------------|---------------|
| Luke-warm Water | 270mls | 340mls | 440mls |
| Eggs, lightly whisked | 2 | 3 | 4 |
| Vegetable Oil | 3 tablespoons | 4 tablespoons | 5 tablespoons |
| White Vinegar | 1 teaspoon | 1 teaspoon | 1 ½ teaspoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Brown Rice Flour | 140g | 150g | 175g |
| White Rice Flour | 200g | 240g | 310g |
| Xanthan Gum | 3 teaspoons | 1 tablespoon | 1 tablespoon |
| Dried Yeast | 1 ½ teaspoons | 1 ½ teaspoons | 2 teaspoons |

Gluten/Yeast Free Breads continued

| Gluten Free Grain Bread | 750g | 1kg | 1.25kg |
|--------------------------------|--------------|-----------------|---------------|
| Luke-warm Water | 210g | 280mls | 375mls |
| Eggs, lightly whisked | 2 | 2 | 3 |
| Vegetable Oil | 80mls | 100mls | 125mls |
| White Vinegar | ½ teaspoon | 1 teaspoon | 1 teaspoon |
| Arrowroot, sieved | 140g | 185g | 250g |
| Xanthan Gum | 2 teaspoons | 3 teaspoons | 1 tablespoon |
| White Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Mixed Grain | ¼ cup | ⅓ cup | ½ cup |
| Brown Rice Flour | 40g | 45g | 60g |
| Salt | ¾ teaspoon | 1 teaspoon | 1 ½ teaspoons |
| Besan Flour | 40g | 45g | 60g |
| White Rice Flour | 150g | 195g | 260g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

** For mixed grain, we use a combination of sesame seeds, poppy seeds, sunflower seeds and pepitas.

| Gluten Free Rice & Besan Bread | 750g | 1kg | 1.25kg |
|-------------------------------------------|-----------------|-----------------|---------------|
| Luke-warm Water | | 290mls | 400mls |
| Eggs, lightly whisked | | 2 | 3 |
| Vegetable Oil | | 3 tablespoons | 4 tablespoons |
| White Vinegar | | 1 teaspoon | 1 teaspoon |
| White Rice Flour | | 220g | 275g |
| Arrowroot, sieved | Not recommended | 185g | 230g |
| Xanthan Gum | | 3 teaspoons | 1 tablespoon |
| White Sugar | | 1 ½ tablespoons | 2 tablespoons |
| Brown Rice Flour | | 50g | 60g |
| Salt | | 1 teaspoon | 1 ½ teaspoons |
| Besan Flour | | 50g | 60g |
| Dried Yeast | | 1 ½ teaspoons | 1 ½ teaspoons |

Gluten/Yeast Free Breads continued

| Yeast-free Lemon & Banana Bread** | 750g | 1kg | 1.25kg |
|----------------------------------------------|---------------|---------------|---------------|
| Vegetable oil | 40mls | 3 tablespoons | 80mls |
| Eggs, lightly whisked | 1 | 2 | 3 |
| Buttermilk* | 140mls | 180mls | 200mls |
| Honey | 2 tablespoons | ¼ cup | ⅓ cup |
| Salt | ¼ teaspoon | ¼ teaspoon | ½ teaspoon |
| Finely grated lemon rind | 3 teaspoons | 1 tablespoon | 1 tablespoon |
| Ripe banana, mashed | 130g | 150g | 160g |
| Self-raising Flour | 370g | 450g | 560g |

*We recommend you do not use buttermilk substitutes (ie: milk with lemon or vinegar) for this recipe as the un-controlled acid levels may have an impact on the flavour and texture of the bread.

**We recommend the light crust setting for this loaf

| Yeast Free Multigrain Loaf | 750g | 1kg | 1.25kg |
|-----------------------------------|-----------------|---------------|-----------------|
| Vegetable Oil | 2 ½ tablespoons | 3 tablespoons | 4 tablespoons |
| Eggs, lightly whisked | 2 | 2 | 3 |
| Milk | 150mls | 180mls | 225mls |
| Salt | ¼ teaspoon | ¼ teaspoon | ½ teaspoon |
| White Sugar | 1 ½ tablespoons | 2 tablespoons | 2 ½ tablespoons |
| Mixed Grain | ¼ cup | ⅓ cup | ½ cup |
| Self-raising Flour | 420g | 500g | 650g |

** For mixed grain, we use a combination of sesame seeds, poppy seeds, sunflower seeds and pepitas**

Gluten/Yeast Free Breads continued

| Capsicum & Cheese Yeast Free Bread | 750g | 1kg | 1.25kg |
|-----------------------------------------------|---------------|-----------------|---------------|
| Vegetable Oil | 2 tablespoons | 3 ½ tablespoons | 4 tablespoons |
| Eggs, lightly whisked | 2 | 2 | 3 |
| Buttermilk* | 125mls | 180mls | 225mls |
| Shredded Parmesan Cheese | ¼ cup | ¼ cup | ⅓ cup |
| Salt | ¼ teaspoon | ¼ teaspoon | ½ teaspoon |
| Sugar | 1 teaspoon | 2 teaspoons | 3 teaspoons |
| Self-raising Flour | 375g | 500g | 625g |
| Fruit & Nut Dispenser | | | |
| Red Capsicum, finely chopped | ¼ cup | ⅓ cup | ½ cup |

*We recommend you do not use buttermilk substitutes (ie: milk with lemon or vinegar) for this recipe as the un-controlled acid levels may have an impact on the flavour and texture of the bread.

Wheat Breads Menu 4

To use the Wheat Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 4 (Wheat). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.

6. Press START. Bread will be baked in the time indicated on the screen.

Note: Mixing will not commence straight away as there is a 30 minute pre-heat feature on this setting.

7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

| Wholemeal Bread | 750g | 1kg | 1.25kg |
|-----------------------|-----------------|---------------|-----------------|
| Luke-warm Water | 320mls | 420mls | 520mls |
| Butter | 30g | 40g | 50g |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Brown Sugar | 1 ½ tablespoons | 2 tablespoons | 2 ½ tablespoons |
| Skim Milk Powder | 2 tablespoons | 3 tablespoons | 4 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Plain Flour | 540g | 700g | 860g |
| Dried Yeast | 1 ½ teaspoons | 1 ½ teaspoons | 2 teaspoons |

Wheat Breads continued

| Multigrain | 750g | 1kg | 1.25kg |
|-----------------------|---------------|-----------------|---------------|
| Luke-warm Water | 260mls | 350mls | 440mls |
| Butter | 20g | 30g | 40g |
| Salt | ¾ teaspoon | 1 teaspoon | 1 ½ teaspoons |
| Brown Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Skim Milk Powder | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Grain Mix | ⅓ cup | ½ cup | ¾ cup |
| Plain Flour | 180g | 240g | 300g |
| Wholemeal Plain Flour | 215g | 285g | 360g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |

** For mixed grain, we use a combination of sesame seeds, poppy seeds, sunflower seeds and pepitas**

| Soy and Linseed Bread | 750g | 1kg | 1.25kg |
|-----------------------|---------------|-----------------|-----------------|
| Luke-warm Water | 240mls | 320mls | 430mls |
| Butter | 20g | 30g | 40g |
| Linseed Meal | 2 tablespoons | 3 tablespoons | 4 tablespoons |
| Soy Compound | ¼ cup | ¼ cup | ¼ cup |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Brown Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Skim Milk Powder | 1 tablespoon | 2 tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Plain Flour | 160g | 210g | 280g |
| Plain Flour | 220g | 285g | 380g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Wheat Breads continued

| Rye Bread | 750g | 1kg | 1.25kg |
|-----------------------|--------------|-----------------|---------------|
| Luke-warm Water | 240mls | 320mls | 430mls |
| Butter | 20g | 30g | 40g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Molasses | ¼ cup | ¼ cup | ¼ cup |
| Caraway Seeds | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Plain Flour | 160g | 210g | 280g |
| Rye Flour | 220g | 285g | 380g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

| Sunflower and Oatmeal Bread | 750g | 1kg | 1.25kg |
|-----------------------------------------|---------------|-----------------|-----------------|
| Luke-warm Water | 250mls | 315mls | 415mls |
| Butter | 30g | 40g | 50g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Honey | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoon | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Whole Wheat Flour | 100g | 150g | 200g |
| Plain Flour | 150g | 300g | 410g |
| Oatmeal | 50g | 70g | 100g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit and Nut Dispenser Sunflower Seeds | ¼ cup | ½ cup | ⅔ cup |

Wheat Breads continued

| Wholemeal Raisin and Nut | 750g | 1kg | 1.25kg |
|---------------------------------|--------------|-----------------|-----------------|
| Luke-warm Water | 250mls | 315mls | 380mls |
| Butter | 30g | 40g | 50g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Brown Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Plain Flour | 350g | 460g | 580g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit and Nut Dispenser | | | |
| Raisins | ¼ cup | ⅓ cup | ½ cup |
| Walnuts, chopped | ¼ cup | ¼ cup | ⅓ cup |

| Muesli Bread | 750g | 1kg | 1.25kg |
|--------------------------------|--------------|-----------------|---------------|
| Luke-warm Water | 320mls | 360mls | 390mls |
| Butter | 20g | 40g | 60g |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Brown Sugar | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Flour | 150g | 175g | 225g |
| Plain Flour | 320g | 380g | 420g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit and Nut Dispenser | | | |
| Muesli, toasted | ½ cup | ⅔ cup | ¾ cup |

Wheat Breads continued

| Pumpernickel Bread | 750g | 1kg | 1.25kg |
|---------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 250mls | 270mls | 360mls |
| Butter | 30g | 40g | 50g |
| Skim Milk Powder | 2 tablespoons | 3 tablespoons | 4 tablespoons |
| Cocoa Powder, sieved | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Treacle | ¼ cup | ⅓ cup | ½ cup |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Rye Flour | 90g | 120g | 140g |
| Wholemeal Flour | 300g | 405g | 460g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

Sweet Breads Menu 5

To use the Sweet Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 5 (Sweet). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.

Note: Due to the amount of sugar in sweet bread, we recommend selecting light crust.

6. Press START. Bread will be baked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

| Cinnamon and Raisin Bread | 750g | 1kg | 1.25kg |
|----------------------------------|---------------|-----------------|-----------------|
| Luke-warm Water | 240mls | 300mls | 340mls |
| Ground Cinnamon | 2 teaspoons | 2 ½ teaspoons | 3 teaspoons |
| Butter | 20g | 40g | 60g |
| Salt | 1 teaspoon | 2 teaspoons | 2 ½ teaspoons |
| Brown Sugar | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 2 tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain flour | 380g | 415g | 550g |
| Dried Yeast | 1 ½ teaspoons | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit and Nut Dispenser | | | |
| Sultanas or Raisins | ½ cup | ⅔ cup | ¾ cup |

Sweet Breads continued

| Chocolate Bread | 750g | 1kg | 1.25kg |
|------------------------|---------------|---------------|-----------------|
| Luke-warm Water | 250mls | 300mls | 360mls |
| Butter | 20g | 40g | 60g |
| Cocoa Powder, sifted | 2 tablespoons | 3 tablespoons | 4 tablespoons |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Sugar | 2 tablespoons | 3 tablespoons | 4 tablespoons |
| Skim Milk Powder | 1 tablespoon | 2 tablespoons | 2 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Chocolate Chips | ½ cup | ¾ cup | ⅔ cup |
| Plain Flour | 410g | 440g | 480g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |

| Banana and Macadamia Bread | 750g | 1kg | 1.25kg |
|-----------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 100mls | 150mls | 210mls |
| Butter | 40g | 50g | 60g |
| Ripe Banana, mashed | 170g | 200g | 250g |
| Eggs, lightly whisked | 1 | 1 | 1 |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Sugar | 3 tablespoons | 3 ½ tablespoons | 4 tablespoons |
| Skim Milk Powder | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 390g | 450g | 510g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 1 ½ teaspoons |
| Fruit and Nut Dispenser | | | |
| Macadamia Nuts, Roughly Chopped | ½ cup | ¾ cup | ¾ cup |

Sweet Breads continued

| Apple Spice Bread | 750g | 1kg | 1.25kg |
|--------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 190mls | 280mls | 375g |
| Butter | 20g | 40g | 60g |
| Ground Cinnamon | 2 teaspoons | 2 ½ teaspoons | 3 teaspoons |
| Ground Cloves | ¼ teaspoon | ½ teaspoon | ½ teaspoon |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 teaspoons |
| Brown Sugar | 2 tablespoons | 2 ½ tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 360g | 510g | 660g |
| Dried Yeast | 1 ½ teaspoons | 2 teaspoons | 2 teaspoons |
| Fruit and Nut Dispenser | | | |
| Dried Apples, chopped | ½ cup | ⅔ cup | ¾ cup |

| Apricot Bread | 750g | 1kg | 1.25kg |
|--------------------------------|-----------------|-----------------|---------------|
| Luke-warm Water | 175mls | 240mls | 320mls |
| Butter | 20g | 40g | 60g |
| Nutmeg, ground | 1 teaspoon | 2 ½ teaspoons | 3 teaspoons |
| Salt | 1 teaspoon | 2 teaspoons | 2 ½ teaspoons |
| Brown Sugar | 1 ½ tablespoons | 2 tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 340g | 450g | 550g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Fruit and Nut Dispenser | | | |
| Dried Apricots, chopped | ½ cup | ⅔ cup | ¾ cup |

Sweet Breads continued

| Mixed Fruit Bread | 750g | 1kg | 1.25kg |
|--------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 175mls | 260mls | 350mls |
| Butter | 20g | 40g | 50g |
| Ground Cloves | ½ teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Ground Nutmeg | 1 ½ teaspoons | 2 ½ teaspoons | 3 teaspoons |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Brown Sugar | 2 tablespoons | 2 tablespoons | 3 tablespoons |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 340g | 475g | 615g |
| Dried Yeast | 2 teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Fruit and Nut Dispenser | | | |
| Mixed Dried Fruit | ½ cup | ⅔ cup | ¾ cup |

| Maple Walnut Bread | 750g | 1kg | 1.25kg |
|--------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 170mls | 190mls | 255mls |
| Butter | 20g | 40g | 60g |
| Salt | 1 teaspoon | 1 teaspoon | 1 ½ teaspoons |
| Maple Syrup | ¼ cup | ½ cup | ½ cup |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 200g | 270g | 340g |
| Wholemeal Plain Flour | 200g | 270g | 340g |
| Dried Yeast | 1 ½ teaspoons | 2 teaspoons | 2 teaspoons |
| Fruit and Nut Dispenser | | | |
| Walnuts, chopped | ½ cup | ⅔ cup | ¾ cup |

Sweet Breads continued

| Fig and Golden Syrup Bread | 750g | 1kg | 1.25kg |
|-----------------------------------|---------------|-----------------|---------------|
| Luke-warm Water | 210mls | 275mls | 360mls |
| Butter | 20g | 40g | 60g |
| Salt | 1 teaspoon | 2 teaspoons | 2 teaspoons |
| Ground Ginger | 1 teaspoon | 1 teaspoon | 1 ½ teaspoons |
| Golden Syrup | ¼ cup | ½ cup | ½ cup |
| Skim Milk Powder | 1 tablespoon | 1 ½ tablespoons | 2 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 380g | 440g | 550g |
| Dried Yeast | 1 ½ teaspoons | 2 teaspoons | 2 teaspoons |
| Fruit and Nut Dispenser | | | |
| Dry Figs, chopped | ½ cup | ⅔ cup | ¾ cup |

| Ginger Spicebread | 750g | 1kg | 1.25kg |
|--------------------------------|---------------|---------------|---------------|
| Luke-warm Water | 240mls | 280mls | 375mls |
| Butter | 20g | 40g | 50g |
| Salt | 1 ½ teaspoons | 2 teaspoons | 2 ½ teaspoons |
| Ground Ginger | 2 teaspoons | 2 ½ teaspoons | 3 teaspoons |
| Golden Syrup | ¼ cup | ¼ cup | ¼ cup |
| Ground All spice | 1 teaspoon | 1 teaspoon | 1 ½ teaspoon |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 380g | 480g | 600g |
| Dried Yeast | 1 ½ teaspoons | 2 teaspoons | 2 teaspoons |
| Fruit and Nut Dispenser | | | |
| Sultanas | ¼ cup | ⅓ cup | ½ cup |
| Slivered Almonds | ¼ cup | ¼ cup | ⅓ cup |

French Breads Menu 6

To use the French Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.

5. Press the MENU button to select menu 6 (French). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.
6. Press START. Bread will be baked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

| French Bread | 750g | 1kg | 1.25kg |
|-----------------|--------------|---------------|-----------------|
| Luke-warm Water | 260mls | 315mls | 370mls |
| Butter | 30g | 40g | 50g |
| Salt | 1 teaspoon | 2 teaspoons | 3 teaspoons |
| Sugar | 1 tablespoon | 1 tablespoon | 1 ½ tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Plain Flour | 460g | 610g | 755g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |

| Sourdough | 750g | 1kg | 1.25kg |
|-----------------------|--------------|---------------|-----------------|
| Luke-warm Water | 170mls | 210mls | 250mls |
| Butter | 15g | 20g | 30g |
| Natural Yoghurt | ½ cup | 2/3 cup | ¾ cup |
| Lemon Juice | 2 teaspoons | 1 tablespoon | 1 ½ tablespoons |
| Salt | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |
| Sugar | 1 tablespoon | 2 tablespoons | 3 tablespoons |
| Bread Improver | 1 teaspoon | 1 teaspoon | 1 teaspoon |
| Wholemeal Plain Flour | 420g | 545g | 670g |
| Dried Yeast | 1 teaspoon | 1 ½ teaspoons | 2 teaspoons |

Cake Menu 7

To use the Cake setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 7 (Cake). Press the SIZE button to select the cake size. Press the CRUST button to select your desired crust colour.

Note: If using a packet cake mix, select 1kg size, light crust colour

6. Press START. Cake will be cooked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the cake before cutting.

Handy hints for optimum results.

- It is normal for cakes to rise only 1/2 way up the bread pan. The texture should be nice and light.
- Due to the high sugar and fat content in cakes, we suggest you always use the Light crust colour setting to prevent the sides from burning.
- Avoid using double quantities of cake mix, the larger cake will not cook through and will be dense in texture in the bread maker.
- We recommend the use of packet cake mixes, available from all supermarkets.
- Allow the cake to cool in the bread pan for at least 10 minutes before removing to a cooling rack.
- Loosen the sides with a plastic spatula and gently slide out.

Do not use Time Delay Setting when baking cakes as the ingredients will spoil.

Extra Turbo Breads

Menu 8

Using this Extra Turbo menu, basic breads will be ready in about 80 minutes.

To use the Extra Turbo Bread setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid. Add the specified ingredients to the fruit and nut dispenser (if applicable).
4. Turn the power on from the power point.
5. Press the MENU button to select menu 8 (Extra Turbo). Press the SIZE button to select the loaf size. Press the CRUST button to select your desired crust colour.
6. Press START. Bread will be baked in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Stand for 10 minutes before turning onto a wire rack to cool. When cool, ensure the kneading blade is removed from the base of the bread before cutting.

Note: Due to the decreased rising time, it is normal for extra turbo breads to be quite dense.

Jam Menu 9

To use the Jam setting:

1. Ensure the kneading blade is in the bread pan.
2. Prepare the fruit as instructed. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid.
4. Turn the power on from the power point.
5. Press the MENU button to select menu 9 (Jam).
6. Press START. Jam will be ready in the time indicated on the screen.
7. On completion, use oven mitts to remove the bread pan from the baking chamber. Immediately pour jam into sterilised jars; seal immediately and turn jars upside down until cold. This will sterilize the lid and help create a vacuum. Jam will set on cooling. Cool to room temperature before storing in the refrigerator.

- Don't be tempted to increase these recipes, as they may overflow.
- If trying your own jam recipe in the bread maker for the first time, be sure to keep a close eye on your jam to make sure it doesn't overflow.
- To sterilise jars, place clean, glass jars, without any chips or cracks, in a large saucepan and cover with cold water. Place the lid on and bring to boil. Boil for 20 minutes. Remove the jars using tongs on the outside of the jar only. Stand upright on a heat-proof board. Do not dry, as their own heat will quickly dry them.
- Alternatively, place clean, glass jars, without any chips or cracks, into the oven at 100°C for 20-25 minutes. Remove from the oven using oven mitts and fill immediately with hot jam.
- Jam setta is a powder containing pectin that assists Jam to set and "gel". It can be bought from supermarkets in 50g packets.

Jam - continued

Apple & Rhubarb Jam

Makes: 500mls

1 apple, washed, peeled and chopped
300g rhubarb, washed and chopped
150mls water
1 cup sugar
2 tablespoons lemon juice
3 tablespoon Jam Setta

Kiwi Jam

Makes: 450mls

6 large kiwi fruit, peeled and chopped
1 cup sugar
1 tablespoon water
1 tablespoon lemon juice
3 tablespoons Jam Setta

Traditional Marmalade

Makes: 500mls

500g Seville oranges, washed, halved and thinly sliced
1 ½ cups sugar
2 tablespoons lemon juice
3 tablespoons Jam Setta

Plum Jelly

Makes: 500mls

500g fresh plums, washed, peeled, deseeded and chopped
1 ½ cups sugar
1 tablespoon lemon juice
3 tablespoons Jam Setta

Strawberry Jam

Makes: 500mls

500g strawberries, washed, hulled and chopped
1 ½ cups sugar
3 tablespoons Jam Setta

Pasta Dough Menu 11

To use the Pasta Dough setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid.
4. Turn the power on from the power point.

5. Press the MENU button to select menu 11 (Pasta Dough).

6. Press START. Dough will be complete in the time indicated on the screen. Follow instructions given after each recipe.

Note: Pasta dough should feel soft but not sticky. If pasta dough feels sticky to touch, add some additional flour.

Basic Pasta Dough

500g plain flour

4 x 60g eggs

½ teaspoon salt

125mls water

1. Using a pasta machine, roll out dough into thin sheets. You may need to pass the pasta dough through the machine several times, reducing the thickness with each roll. Cut pasta into desired style. Hang over a rack or rolling pin to dry if not using immediately.

Pumpkin and Ricotta Ravioli

Serves: 4

1 quantity basic pasta dough

Filling

150g pumpkin, peeled, baked and mashed

100g ricotta, mashed

Salt and pepper, to taste

300g breadcrumbs

Pinch of nutmeg

1 teaspoon garlic, minced

1. Combine all filling ingredients in a large bowl. Mix well to combine. If the mixture appears too dry, add an egg to combine. Season to taste with salt and pepper.

2. Divide dough into 4 portions. Roll each portion into a 25cm x 25cm square.

3. Place 2 teaspoons of filling 5cm apart on 2 sheets of the rolled out dough. Brush edges with a little water or beaten egg and top with remaining pieces of rolled pasta. Press firmly between the filling and sides to seal in filling. Cut ravioli into squares using a pastry wheel.

4. Cook ravioli in a large saucepan of boiling water for 5-8 minutes or until al dente. Drain well and serve with your favourite sauce.

Pasta Dough - continued

Fettuccine with Tomato Sauce

1 quantity basic pasta dough

Sauce

3 tablespoons olive oil

1 onion, chopped,

2 x 400g cans crushed tomatoes

2 tablespoons tomato paste

Salt and pepper, to taste

½ cup parmesan cheese

1. To make the sauce, heat the oil in a frypan.

Add onion and cook until transparent.

2. Add the tomatoes, tomato paste and salt and pepper to taste. Allow to simmer for 20 minutes.

3. To make pasta, using a pasta machine, roll out pasta dough into three 10cm x 40cm rectangular pieces. Using the pasta machine, roll the pasta through the fettuccini guide to cut pasta.

4. Bring a large saucepan of water to the boil. Add 1 tablespoon of oil and cook fettuccini for 5-8 minutes or until al dente. Serve with fresh tomato sauce and parmesan.

Spaghetti Carbonara

1 quantity pasta dough

Sauce

3 tablespoons olive oil

2 cloves garlic, crushed

6 rashers bacon, chopped

⅓ cup wine

¼ cup cheddar cheese

½ cup parmesan cheese

4 eggs

Pepper to taste

2 tablespoons parsley, chopped

1. To make sauce, heat oil in a large frypan and add garlic. Stir until fragrant. Add bacon and cook until crisp. Add wine and simmer for 1 minute.

2. Whisk cheese, eggs, pepper and parsley in a bowl. Add mixture to the pan and stir until well combined over low heat.

3. Using a pasta machine, roll out pasta dough into three 10cm x 40cm rectangular pieces. Using the pasta machine, roll the pasta through the spaghetti guide to cut pasta.

4. Bring a large saucepan of water to the boil. Add 1 tablespoon of oil and cook spaghetti for 5-8 minutes or until al dente.

5. Return the cooked pasta to the pan and toss through sauce until well combined. Serve warm with extra parmesan cheese.

Pizza Dough / Dough

Menu 12

This setting can be used for all types of dough, not just pizza dough.

This menu allows you to create a variety of doughs for breads, croissants, bread rolls and pizza to bake in a conventional oven.

Once the cycle is complete, place the dough onto a floured surface and using floured hands, shape as desired. Prepare your baking trays by greasing them lightly with butter or oil spray, or simply by dusting them with a little flour.

Place the shaped dough onto your prepared tray and allow it to proof. Proofing allows your bread to rise, making it light and airy.

To add interest to breads, try some different shaping techniques or mix and match different glazes and toppings. These should be applied just before baking, after the dough rises (proofs) for the final time.

Bake your bread in a moderately hot (200°C/180°C fan-forced) oven until cooked through. The easiest way to test bread is to tap the top. It will sound hollow when cooked through.

Remove cooked bread from the pan or baking tray and cool on a cooling rack. Allow to cool before slicing.

Toppings

Toppings can add character and flavour to bread, but be sure when using a topping, to brush the dough with a little milk (or other glaze), so the topping has something to “grip” to. Otherwise as your bread rises and bakes, the topping will fall off.

Toppings can include seeds, such as poppy, caraway, sesame, pepitas or sunflower seeds, mixed grain, oats, dry or fresh herbs, garlic, cinnamon sugar, salt, sliced olives, sundried tomatoes, crumbled fresh cheeses, grated melting cheeses. If adding melting cheese, you may want to add this in the last 10 minutes of cooking, so it doesn't burn.

Glazes

Glazes can be brushed over the dough before or after baking; by using a clean soft pastry brush.

Crisp, shiny crust, darker golden colour – brush with beaten egg yolk before baking.

Soft, rich golden, satiny crust – brush with egg white before baking.

Soft, matt finish – brush with milk before baking.

Moist glaze that highlights the golden colour – brush with melted butter or margarine after baking.

Sweet, glossy, sticky crust – brush with sieved apricot jam after baking.


Drizzle cooled, sweet tea rings or buns with icing or dust with icing sugar before serving.

Alternatively, for a rustic artisan look, you could just sprinkle with a little extra flour before baking.


Pizza Dough / Dough continued

Shaping Techniques:


Rustic loaf – Working on a lightly floured surface, use the palms of your hands (dusted with flour) to gently tuck dough under itself until you get a smooth rounded top surface. Place on prepared baking tray. Using a sharp knife, make 1cm deep slashes across the top of your dough. Allow to rise before baking.

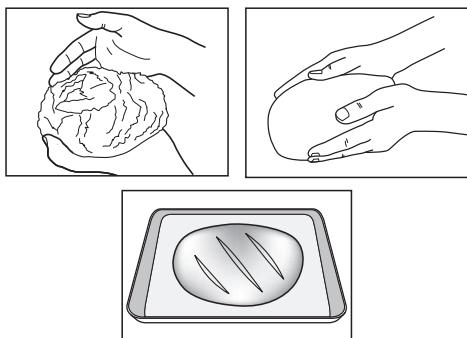


Loaf Pan – Working on a lightly floured surface, roll the dough into a 1cm thick rectangle (the same width as your loaf pan). Starting at the shorter side, roll the dough to form a log (at this stage, you may like to brush with butter or spread/sprinkle with a flavouring such as pesto or cheese). Place log into a greased loaf pan. Allow the dough to rise to the top of the pan before baking, remembering it will rise some more as it bakes.

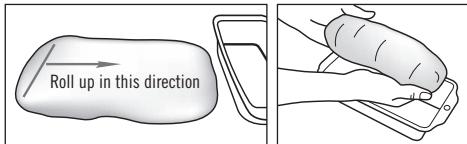

Plaited loaf – Divide your dough into 3 equal portions. Shape into long sausages. Brush ends with a little milk or water and press together. Bring right sausage to centre, then left sausage to centre. Repeat until loaf is complete. Brush ends with milk or water to join. Tuck ends slightly under the loaf to neaten. Gently place on a prepared baking tray. Allow to rise before baking.

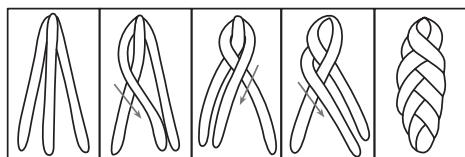


Flat bread/focaccia-style – Roll bread dough to the desired shape and size about 1cm thick. Allow to rise on a prepared baking tray. Before placing in the oven, use your knuckles or finger tips to make indents in the dough. Brush with a little oil and sprinkle with salt.

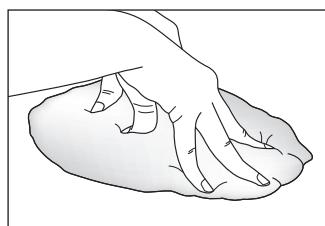


Pizza Dough / Dough continued


Scrolls – Working on a lightly floured surface, use your fingers to flatten the dough into a 1cm thick rectangle. Starting at the shorter side, roll the dough to form a log. Spread/sprinkle with a flavouring of choice, such as pesto, cheese, brown sugar or nuts. Cut into 2cm wide pieces. Place, cut side down, touching one another in a greased lamington or cake pan. Bake.

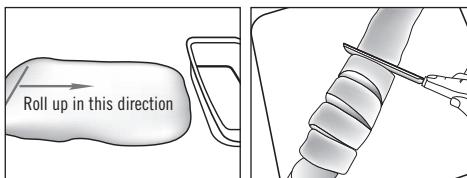

Bread sticks – roll small pieces of dough into long skinny sausages. Bake, separated on prepared baking trays until thoroughly dry and golden.

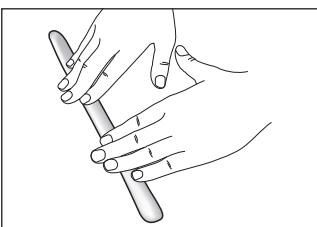


Baguettes – Roll portions of dough into thick sausages. Place on prepared baking trays. Using a sharp knife, make 1cm deep slashes along the top of the dough. Allow to rise before baking.

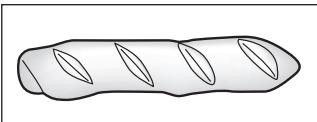

Round bread rolls – Divide dough into equal portions (generally 6-8 portions). Working with one portion at a time, with floured hands, pinch and tuck dough under itself until you get a smooth rounded top surface. Place on prepared baking trays. Allow to rise slightly before baking.

Knotted bread rolls - Roll a small portion of dough into a sausage. Cross ends over and tuck one end through the loop. Place on prepared baking trays. Allow to rise slightly before baking.

Florets – Take 3 small portions of dough and roll into round balls. Place the 3 balls, side by side into a greased muffin pan. Allow to rise slightly before baking.

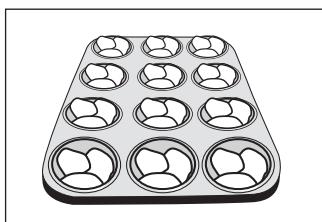

Pizza Dough / Dough continued

To use the Pizza Dough/ Dough setting:

1. Ensure the kneading blade is in the bread pan.
2. Place the ingredients into the bread pan in the order listed.
3. Wipe any spills from the outside of the pan. Place the pan into the bread maker and close the lid.
4. Turn the power on from the power point.

5. Press the MENU button to select menu 12 (Pizza Dough/ Dough).

6. Press START. Dough will be complete in the time indicated on the screen. Follow instructions given after each recipe.

Note: Pasta dough should feel soft but not sticky. If pasta dough feels sticky to touch, add some additional flour.

Pizza Dough

290mls luke-warm water

1 teaspoon sugar

2 tablespoons olive oil

½ teaspoon salt

480g Plain flour

2 ½ teaspoons Dried Yeast

1. Remove the completed dough from the bread pan. Divide dough into 2 equal portions. Roll dough on a lightly floured surface into large rounds. Place on pizza trays and top as desired.

2. Bake on 220C for 10-15 minutes or until base is crisp and cooked through.

Makes: 2 pizzas

Herb Focaccia

330mls luke-warm water

1 tablespoon olive oil

½ teaspoon salt

1 tablespoon skim milk powder

2 teaspoons sugar

480g plain flour

2 ½ teaspoons yeast

Topping

2 tablespoons olive oil

1 teaspoon oregano

1 teaspoon chopped basil

1. Preheat oven to 180C. Grease rectangular baking tray. Remove completed dough from bread pan.

2. Knead dough with a little extra flour until elastic and dough springs back when pressed. Shape to fit baking tray.

3. Cover and allow to rise for 30 minutes. Using your knuckles, press small indents into dough.

4. Brush surface with oil and sprinkle with herbs and bake in pre-heated oven for 30 minutes or until golden.

Pizza Dough / Dough continued

Hot Cross Buns

Dough

330mls luke-warm water

2 tablespoons Butter

1 egg

$\frac{3}{4}$ cup sultanas

$\frac{1}{2}$ teaspoon nutmeg

$\frac{1}{2}$ teaspoon salt

$\frac{1}{4}$ cup brown sugar

520g plain flour

2 $\frac{1}{2}$ teaspoons yeast

Crosses

80g plain flour

80mls water

2 teaspoons sugar

Glaze

2 tablespoons water

2 tablespoons sugar

1 teaspoon gelatine

1. Preheat oven to 180C. Line a baking tray with baking paper. Remove completed dough from bread pan.

2. Knead dough on a floured surface until elastic and springs back when pressed. Divide dough in 12 pieces. Shape each piece into a ball. Place close together on baking tray. Cover and allow to rise for 30 minutes.

3. CROSSES: Mix flour, water and sugar together until smooth. Pipe crosses over risen dough.

4. Bake buns for 30 minutes in pre-heated oven until golden brown.

5. GLAZE: Combine ingredients in a jug. Microwave on medium for 1-2 minutes. Brush over hot buns.

Makes: 12

Bread Sticks

Dough

240mls luke-warm water

2 tablespoons butter

$\frac{1}{2}$ teaspoon salt

2 teaspoons sugar

$\frac{3}{4}$ teaspoon bread improver

480g plain flour

2 $\frac{1}{2}$ teaspoons yeast

Topping

1 teaspoon luke-warm water

1 egg white

Sesame Seeds

1. Preheat oven to 180C. Line a baking tray with baking paper. Remove completed dough from the bread pan.

2. Divide dough into 30 pieces. Roll each piece into a 20cm rope. Place 2.5cm apart on baking tray. Cover and allow dough to rise for 30 minutes.

3. Beat water with the egg white; brush dough. Sprinkle with sesame seeds. Bake for 25 minutes or until breadsticks are golden brown.

Pizza Dough / Dough continued

Bread Rolls

250mls luke-warm water
1/4 cup sugar
1 egg
3/4 teaspoon bread improver
2 tablespoons butter
520g plain flour
1/2 teaspoon salt
2 1/2 teaspoons yeast

1. Preheat oven to 180C. Line a baking tray with baking paper. Remove completed dough from bread pan.
2. Divide dough into 15 pieces and shape each piece into a ball. Place on baking tray, cover and allow to rise for 30 minutes or until doubled in size.
3. Brush with melted butter. Bake for 15 minutes or until golden brown.

Caramel Pecan Rolls

Dough

250mls luke-warm water
2 tablespoons Butter
1 egg
1/2 teaspoon salt
2 tablespoons sugar
520g plain flour
2 1/2 teaspoons yeast

Filling

100g butter, softened
3/4 cup brown sugar
1 cup pecan halves
2 teaspoons cinnamon

1. Preheat oven to 180C. Grease and line a 22cm square baking pan. Remove completed dough from bread pan.
2. Mix together butter, brown sugar, pecan halves and cinnamon.
3. Roll out dough into 45cm x 22cm rectangle on lightly floured surface.
4. Spread over filling. Roll up beginning at short side. Pinch edge of dough into roll to seal. Cut into 2.5cm slices and place cut sides up in pan.
5. Cover and allow to rise for 1 hour or until doubled in size.
6. Bake for 30 minutes until golden brown.

Pizza Dough / Dough continued

Chocolate Cherry Rolls

Dough

250mls luke-warm water

2 tablespoons butter

1 egg

½ teaspoon salt

2 tablespoons sugar

520g plain flour

2 ½ teaspoons yeast

Filling

100g butter, softened

200g dark chocolate, chopped

1 cup glace cherries, chopped

Glaze

½ cup icing sugar

¼ teaspoon vanilla essence

2 tablespoons milk

1 drop pink food colouring

1. Preheat oven to 180. Grease and line a 22cm square baking pan. Remove completed dough from bread pan.
2. Combine butter, chocolate and cherries.
3. Roll out dough into 45cm x 22cm rectangle on lightly floured surface.
4. Spread with filling. Roll up beginning at short side. Pinch edge of dough into roll to seal. Cut into 2.5cm slices and place cut side up in pan.
5. Cover and allow to rise for 1 hour or until doubled in size.
6. Bake for 30 minutes or until golden brown.
7. Combine all glaze ingredients and drizzle over rolls.

PROGRAM SETTING TIMES

| Setting No | Feature | Loaf | Crust | Time (hh:mm) | Preheat (min.) | Knead1 (min.) | Knead2 (min.) | Rise1 (min.) | Rise2 (min.) | Knock down1 (sec.) | Rise2 (sec.) | Rise3 (min.) | Bake (min.) | Warm (min.) |
|------------|--------------------|--------|--------|--------------|----------------|---------------|---------------|--------------|--------------|--------------------|--------------|--------------|-------------|-------------|
| 1 | BASIC | 750g | LIGHT | 3:08 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 53(110°C) | 60(70°C) |
| | | | MEDIUM | 3:16 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 61(110°C) | 60(70°C) |
| | | DARK | 3:26 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 71(110°C) | 60(70°C) | |
| | 1.0kg | LIGHT | 3:12 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 57(110°C) | 60(70°C) | |
| | | MEDIUM | 3:20 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 65(110°C) | 60(70°C) | |
| | | DARK | 3:30 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 75(110°C) | 60(70°C) | |
| 2 | TURBO | 1.25kg | LIGHT | 3:17 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 62(110°C) | 60(70°C) |
| | | | MEDIUM | 3:25 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 70(110°C) | 60(70°C) |
| | | DARK | 3:35 | - | 3 | 20 | 30(30°C) | 20S | 33(30°C) | 10S | 49(30°C) | 80(110°C) | 60(70°C) | |
| | 1.0kg | LIGHT | 2:06 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 54(115°C) | 60(70°C) |
| | | MEDIUM | 2:09 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 57(115°C) | 60(70°C) |
| | | DARK | 2:14 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 62(115°C) | 60(70°C) |
| 3 | GLUTEN /YEAST FREE | 750g | LIGHT | 2:07 | - | 2 | 20 | - | - | - | - | 50(35°C) | 55(115°C) | 60(70°C) |
| | | | MEDIUM | 2:10 | - | 2 | 20 | - | - | - | - | 50(35°C) | 58(115°C) | 60(70°C) |
| | | DARK | 2:15 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 63(115°C) | 60(70°C) |
| | 1.25kg | LIGHT | 2:09 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 57(115°C) | 60(70°C) |
| | | MEDIUM | 2:12 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 60(115°C) | 60(70°C) |
| | | DARK | 2:17 | - | 2 | 20 | - | - | - | - | - | 50(35°C) | 65(115°C) | 60(70°C) |
| 4 | WHEAT | 750g | LIGHT | 2:08 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 55(110°C) | 60(70°C) |
| | | | MEDIUM | 2:16 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 63(110°C) | 60(70°C) |
| | | DARK | 2:26 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 73(110°C) | 60(70°C) | |
| | 1.0kg | LIGHT | 2:10 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 57(110°C) | 60(70°C) | |
| | | MEDIUM | 2:18 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 65(110°C) | 60(70°C) | |
| | | DARK | 2:28 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 75(110°C) | 60(70°C) | |
| 5 | 1.25kg | 750g | LIGHT | 2:13 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 60(110°C) | 60(70°C) |
| | | | MEDIUM | 2:21 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 68(110°C) | 60(70°C) |
| | | DARK | 2:31 | - | 3 | 15 | - | - | 25(35°C) | 30S | 30(35°C) | 78(110°C) | 60(70°C) | |
| | 1.0kg | LIGHT | 3:37 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 51(110°C) | 60(70°C) | |
| | | MEDIUM | 3:45 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 59(110°C) | 60(70°C) | |
| | | DARK | 3:55 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 69(110°C) | 60(70°C) | |
| 6 | WHEAT | 750g | LIGHT | 3:42 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 56(110°C) | 60(70°C) |
| | | | MEDIUM | 3:50 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 64(110°C) | 60(70°C) |
| | | DARK | 4:00 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 74(110°C) | 60(70°C) | |
| | 1.25kg | LIGHT | 3:48 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 62(110°C) | 60(70°C) | |
| | | MEDIUM | 3:56 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 70(110°C) | 60(70°C) | |
| | | DARK | 4:06 | 30(35°C) | 3 | 20 | 38(35°C) | 20S | 25(35°C) | 8S | 50(35°C) | 80(110°C) | 60(70°C) | |

PROGRAM SETTING TIMES

| PROGRAM SETTING TIMES | | | | | | | | | | | | | | |
|-----------------------|-------------|--------|--------|--------------|----------------|---------------|---------------|--------------|--------------------|--------------|--------------------|--------------|-------------|-------------|
| Setting · No | FEATURE | LOAF | CRUST | TIME (hh:mm) | PREHEAT (min.) | KNEAD1 (min.) | KNEAD2 (min.) | RISE1 (min.) | Knock down1 (sec.) | RISE2 (min.) | Knock down2 (sec.) | RISE3 (min.) | BAKE (min.) | WARM (min.) |
| 5 | SWEET | 750g | LIGHT | 3:15 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 57(105°C) | 60(70°C) |
| | | | MEDIUM | 3:23 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 65(105°C) | 60(70°C) |
| | | 1.0kg | DARK | 3:33 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 75(105°C) | 60(70°C) |
| | | | LIGHT | 3:17 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 59(105°C) | 60(70°C) |
| | 1.25kg | MEDIUM | MEDIUM | 3:25 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 67(105°C) | 60(70°C) |
| | | | DARK | 3:35 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 77(105°C) | 60(70°C) |
| | | 750g | LIGHT | 3:21 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 63(105°C) | 60(70°C) |
| | | | MEDIUM | 3:29 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 71(105°C) | 60(70°C) |
| 6 | FRENCH | 1.0kg | DARK | 3:39 | - | 3 | 20 | 40(30°C) | 20S | 24(30°C) | 10S | 51(30°C) | 81(105°C) | 60(70°C) |
| | | | LIGHT | 3:17 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 50(115°C) | 60(70°C) |
| | | 1.25kg | MEDIUM | 3:25 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 58(115°C) | 60(70°C) |
| | | | DARK | 3:35 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 68(115°C) | 60(70°C) |
| | 7 | CAKE | LIGHT | 3:22 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 55(115°C) | 60(70°C) |
| | | | MEDIUM | 3:30 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 63(115°C) | 60(70°C) |
| | | 1.0kg | DARK | 3:40 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 73(115°C) | 60(70°C) |
| | | | LIGHT | 3:29 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 62(115°C) | 60(70°C) |
| 8 | EXTRA TURBO | 1.0kg | MEDIUM | 3:37 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 70(115°C) | 60(70°C) |
| | | | DARK | 3:47 | - | 3 | 22 | 44(30°C) | 20S | 28(30°C) | 10S | 50(30°C) | 80(115°C) | 60(70°C) |
| | | 750g | LIGHT | 1:16 | - | 3 | 13 | - | - | - | - | - | 60(110°C) | 22(70°C) |
| | | | MEDIUM | 1:21 | - | 3 | 13 | - | - | - | - | - | 65(110°C) | 22(70°C) |
| | 9 | CAKE | DARK | 1:26 | - | 3 | 13 | - | - | - | - | - | 70(110°C) | 22(70°C) |
| | | | LIGHT | 1:20 | - | 3 | 13 | - | - | - | - | - | 64(110°C) | 22(70°C) |
| | | 1.0kg | MEDIUM | 1:25 | - | 3 | 13 | - | - | - | - | - | 69(110°C) | 22(70°C) |
| | | | DARK | 1:30 | - | 3 | 13 | - | - | - | - | - | 74(110°C) | 22(70°C) |
| 9 | PIZZA | 1.25kg | LIGHT | 1:30 | - | 3 | 13 | - | - | - | - | - | 74(110°C) | 22(70°C) |
| | | | MEDIUM | 1:35 | - | 3 | 13 | - | - | - | - | - | 79(110°C) | 22(70°C) |
| | | 1.0kg | DARK | 1:40 | - | 3 | 13 | - | - | - | - | - | 84(110°C) | 22(70°C) |
| | | | MEDIUM | 1:20 | - | 1 | 15 | 5 | 15S | 2 | 155 | 2(60°C) | 55(125°C) | 60(70°C) |
| 10 | | JAM | - | 1:20 | 15 | - | - | - | - | - | - | - | 65(105°C) | 14(70°C) |
| 11 | | BAKE | - | 1:00 | - | - | - | - | - | - | - | - | 60(110°C) | 60(70°C) |
| 12 | | PASTA | - | 0:23 | - | 3 | 20 | 37(30°C) | 20S | 50(30°C) | 20 | - | - | - |
| 13 | | PIZZA | - | 1:50 | - | 3 | 20 | 37(30°C) | 20S | 50(30°C) | 20 | - | - | - |

Dispenser door opens at the time 8 minutes before the completion of KNEAD2.

Program Setting Times and Display Information

The LCD window will tell you if there is a problem with your SmartBake CUSTOM. Always use your SmartBake CUSTOM in a room free of drafts. Do not use your

SmartBake CUSTOM outdoors, near a heat vent or in direct sunlight.

| DISPLAY READS | PROBLEM | SOLUTION |
|---------------------|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| “0:00” (:) flashing | Select program setting | Use the Menu button to select program. |
| “E:01” flashing | The baking chamber is too hot to begin another cycle | Open the lid and remove bread pan to cool the chamber. After the panel message disappears, put the bread pan back into the chamber and press START again. |
| “E:02” flashing | Sensor malfunction | Allow the baking chamber to cool, then restart your programming. If the error continues contact Customer Service on |
| “E:03” flashing | Sensor malfunction | Australia 1300 881 861. |
| “E:04” flashing | CPU malfunction | New Zealand 0800 786 232 |
| “E:05” flashing | Heater control malfunction | |
| “E:08” flashing | Heater control malfunction | |

Note: After baking a loaf of bread, it is recommended to cool the breadmaker down to room temperature as temperatures above ambient reduce the rising height of the bread due to the sensitivity of yeast.

You will hear a beep when:

| | |
|------------------------------------|----------------------|
| The power is turned ON | Long beep |
| Select a setting from the Menu | Short beep |
| Completion of bread baking process | Short and Long beeps |

Tip: Display Window Sleep Mode. The Screen will change to sleep mode after 20 minutes and the screen will darken. Push any button to light up the screen again.

Troubleshooting: The Machine

| | | Machine Malfunctions | | | | | | |
|----------------|------------------------------------------------------------------|-------------------------------------|-----------------------|------------------------------|--------------------------------------------|---------------|------------------------------------------------|-------------------------------------|
| | | LED Time indicator does not turn on | Ingredients not mixed | Bread takes too long to bake | Sides of bread collapse and bottom is damp | Under-browned | Browned and centre sticky and raw or not baked | Sides brown but flour coated bottom |
| | Unplugged | ◆ | | | | | | |
| | Bread pan not inserted correctly | | | | | | | |
| | Ingredient spilled on heater element | | | | | | | |
| | Lid was repeatedly open during operation or left open | | | | | ◆ | ◆ | |
| Control Panel: | Program selection was wrong | | ◆ | | | ◆ | | |
| | Mode selection was wrong (DOUGH mode was chosen) | | | | | | ◆ | |
| | Stop/Pause pad was pressed after starting | | | | | | ◆ | |
| | Bread left in bread pan too long after baking | | | | ◆ | | | |
| | Bread sliced just after baking (steam was not allowed to escape) | | | | | | | ◆ |
| | Water added after kneading flour | | | | | | ◆ | |
| | Power Disruption | | | ◆ | | | ◆ | |

Troubleshooting: The Recipes

| Please check the following: | | Baking Results | | | | | | | | |
|---------------------------------------------------------|--------|-----------------------------------|---------------------|-------------------------------|----------|----------------------|---------------------------|-------------|--------------|--------------------------------------------------|
| | | Heavy Dense Texture | Not baked in centre | Open, coarse or holey texture | Collapse | Bread rises too much | Bread doesn't rise enough | Floured top | Over browned | Browned and floured sides, centre sticky and raw |
| MEASUREMENT ERRORS | FLOUR | Not enough | | ◆ | | | | | | |
| | | Too much | ◆ | | | ◆ | | | | |
| YEAST | | Not enough | | | ◆ | | ◆ | | | |
| | | Too much | | | | ◆ | | | | |
| WATER or LIQUID | | Not enough | ◆ | | | | ◆ | | | |
| | | Too much | ◆ | ◆ | ◆ | | ◆ | ◆ | | ◆ |
| SUGAR | | Omitted | ◆ | | | | | | | |
| | | Too much | | | ◆ | | ◆ | | ◆ | |
| SALT | | Omitted | | ◆ | ◆ | ◆ | | | | |
| YEAST: | FLOUR: | Stale or generic brand flour used | ◆ | | | | ◆ | | | |
| | | Self raising flour was used | | ◆ | | | ◆ | ◆ | | |
| | | Old yeast used | ◆ | | ◆ | | ◆ | | | |
| | | Wrong type of yeast used | ◆ | | ◆ | | ◆ | | | |
| Hot water was used instead of water at room temperature | | | | | ◆ | | ◆ | | | |

Notes



Instruction/Recipe Supplement for New Zealand

NEW ZEALAND SUPPLEMENT

PLEASE READ THIS BOOKLET FIRST

This booklet covers the use and care of the following Sunbeam Bread makers:

BM7850 SMARTBAKE CUSTOM which can produce loaf sizes 750g; 1.0kg and 1.25kg

New Zealand Instructions and Recipes

The main Instruction/Recipe Booklet was written in Australia. While most of the information in it is applicable to New Zealand, there are some ingredients and measurements that are different.

This Instruction and Recipe Supplement has been produced to ensure you get the optimum results with your Sunbeam Breadmaker.

How to use the recipes in the main instruction booklet

- Where it lists 'Tandaco Dry Yeast', you must use Edmonds Surebake Yeast instead (bottle with red lid).
- We recommend using 1 teaspoon of Edmonds Surebake Yeast to every cup of flour.
- Where it lists plain flour, you must use High Grade White Flour.
- Do not use 'Bread Improver' as listed in some recipes. The Edmonds Surebake Yeast contains 'improvers' which ensure excellent results.

The Supplement provides:

- Information on the best ingredients to use.
- Advice on measuring ingredients.
- Some popular recipes adapted for New Zealand.
- A guide for adapting the recipes in the main Instruction/ Recipe Booklet for your own use.

- You can check the consistency of the dough part-way through the initial kneading cycle (about 20 minutes after the machine has started). Lift the lid and have a quick look. The dough should be smooth, soft, and slightly sticky and have a tendency to flatten and catch the sides of the container.
- When making jam, instead of Jam Setta, use Jam Setting Mix, which is available at most supermarkets.

Ingredients to use

Flour

Use fresh, good quality flour. Do not use self-raising flour.

White Flour

Most large New Zealand milling companies produce two lines of white flour for the domestic market. One is finely milled 'weak' flour which is ideal for sponges, biscuits, shortbread and short pastry. This type of flour is labelled as standard or plain flour. The second is a strong flour which has been designed for general household baking, including fruit cakes, loaves, pizzas and bread. These 'strong' bread making flours are labelled by the two main milling companies as 'High Grade' and bread making is listed as a possible use. Some small independent mills also market 'strong' flour, labelled as suitable for bread making. We recommend the use of High Grade or bread flour for use in Sunbeam breadmakers. White Flour should be stored in its bag on a cool, dry airy shelf. If your kitchen is rather steamy and warm, keep your flour in an airtight container.

Wholemeal

Wholemeal should always be bought in quantities which can be used up within 8 weeks. Make sure you buy from a shop with a high turnover. Fresh wholemeal has a pleasant, almost sweet smell. Wholemeal which has been kept for too long or which has not been stored carefully has a sour or rancid smell. Store your wholemeal in a refrigerator (remember to allow measured wholemeal to return to room temperature before using to make bread). Wholemeal produced from 'stone ground' organically grown wheat may vary in bread making quality.

Gluten Flour

Gluten Flour is made from white flour and is used to increase the size of loaves made from 100% wholemeal flour. Its use is optional.

Yeast

The recipes in this booklet have been designed to use Edmonds Surebake dried yeast (red cap on bottle). This yeast mixture contains 'improvers' which ensure excellent results. Elfin Instant Dried Yeast may also be used instead. It is recommended that you add 50mg of vitamin C as an 'improver'. Use 1 ½ teaspoons of Elfin yeast for 750g and 1kg loaves. Cut a 100mg tablet of vitamin C (not flavoured) in half. Crush in a dessertspoon with the back of a teaspoon. Dissolve in the measured warm water before adding to the bread pan after the dry ingredients. Use this type of yeast with Elfin bread premixes (as per the instructions on the premix packaging).

Sugars

White or brown sugar has been specified in the recipes in this booklet. Substitute honey, golden syrup, or treacle in the same amounts if desired. Do not use molasses as the New Zealand types may be too strong in flavour. Stiff honey, golden syrup or treacle should be warmed until just runny.

Fats

Fats are used to enhance flavour and retain moisture. Oil is specified in the recipes. Choose a mild flavoured oil. You may substitute the same amount of softened butter, margarine or lecithin granules.

Salt

Iodised New Zealand salt is used in all recipes. Salt controls the actions of the yeast so do not omit.

Water

Use warm water or comfortably warm water (40-46°C). When you dip a finger in the water, it should feel slightly warm. For delay start loaves, use cold tap water.

Jam

Instead of Jam Setta, use Jam Setting Mix, which is available at most supermarkets.

Measuring Ingredients

New Zealand standard metric kitchen measures have been used for all the recipes. All measurements should be level. Accuracy with measuring is important when making bread in a breadmaker.

To measure flour

For optimum results we recommend weighing flour. If scales are not available, use a set of standard metric cups and part cups. Do not use tableware cups. Stir the flour in the storage container, then using a scoop or a large spoon overfill the measuring cup without tapping or shaking. Use the back of a knife to scrape off the excess so that the flour is just level with the rim of the cup.

To measure water

Use a standard metric measuring cup graduated in 10 ml divisions. Place the cup at eye level on a flat surface and fill to the required level.

To measure other ingredients

Use standard metric spoons. A New Zealand metric teaspoon holds 5ml and a metric tablespoon holds 15ml. (note: an Australian metric tablespoon holds 20ml).

Abbreviations

| | |
|------|-----------------|
| g | gram |
| ml | millilitre |
| mg | milligram |
| °C | degrees Celsius |
| Tbsp | tablespoon |
| tsp | teaspoon |

Dough consistency

When using a new recipe or a different batch of flour or if a recipe has not produced a satisfactory result, check the consistency of the dough, part way through the initial kneading cycle (about 10 minutes after the machine has started). Lift the lid and have a quick look. The dough should be smooth, soft and slightly sticky and have a tendency to flatten and catch the sides of the container. Dough which is too stiff will have ragged edges; it will not stick to the sides at all and forms a tight round ball. In this case add one tablespoon of extra water. Dough which is too soft will be sticky and be reluctant to form a ball. Add one tablespoon of extra flour.

Troubleshooting

Special Concerns

For important information on troubleshooting, please read the main Instruction/Recipe booklet. For further assistance, please phone Sunbeam Customer Services 0800 SUNBEAM (0800 786 232)

For Service in New Zealand

If your Sunbeam Breadmaker is within the 12 month warranty period, enquiries in the first instance should be directed to Sunbeam Customer Services. Please contact our Customer Services hot line **0800 SUNBEAM (0800 786 232)**

Should your Breadmaker be outside the 12 month warranty period, please refer to an authorised Sunbeam Service agent. They will be able to assist you with any non-warranty concerns you may have.

12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861
Units 5 & 6,
13 Lord Street,
Botany NSW 2019
Australia

New Zealand
www.sunbeam.com.nz
0800 786 232
Unit 3, Building D,
26 Vestey Drive,
Mt Wellington
Auckland
New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

New Zealand | visit www.sunbeam.co.nz
phone 0800 786 232
mail Level 6, Building 5, Central
Park, 660-670 Great South
Road, Greenlane, Auckland.

Sunbeam Corporation PTY Limited | ACN 000 006 771

Sunbeam is a registered trademark.

SmartBake is a trade mark of Sunbeam Corporation.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise,

the product you buy may differ slightly from the one shown here.

Approved by the appropriate electrical regulatory authorities.

© Sunbeam Corporation Limited 2017.

01/17